
# $\mathsf{SCHLAGE}_{ extstyle 0}$

## **ND-Series Tailpiece Install Sheet**

 
Use this sheet and the included tailpieces to retrofit an existing cylinder with an ND-Series tailpiece.

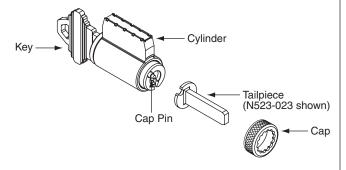

#### Remove Cylinder Cap

- Depress cap pin and rotate cap counterclockwise.
- b. Remove cap from cylinder.
- c. Remove existing tailpiece.


View of Back of Cylinder



Classic Cylinder Shown


### **Select New Tailpiece**

Graphic shown actual size

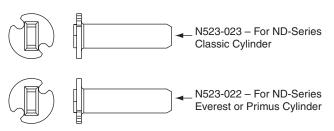

#### **Install New Tailpiece**

 - Place new tailpiece (in the vertical position) against back of cylinder.
- b. Place cap over tailpiece.
- c. Depress cap pin and rotate cap clockwise until tight.



Classic Cylinder Shown

#### **IMPORTANT**

If key does not come out of cylinder easily, cap is too lose. If key does not turn smoothly in cylinder, cap is too tight.



©2003 Ingersoll-Rand Company Printed in U.S.A. Rev. 06/03