

- MOUNTING HEIGHTS AS SHOWN ALL

COORDINATE MOUNTING LOCATIONS WITH ELECTRICAL/ARCHITECTURAL PLANS ANY DEVIATION FROM HARDWARE SPECIFIED IN SECTION 08710 WILL NEGATE ALL REQUIREMENTS SHOWN HEREIN AND REQUIRE NEW DRAWINGS BY OTHERS TO MATCH SUBSTITUTED HARDWARE

## OPERATIONAL DESCRIPTION:

DOR NORMALY CLOSED AND LOCKED. ENTRY BY VALID CREDENTIAL AT CARD READER, REMOTE PUSHBUTTON, OR BY KEY OVER-RIDE. REQUEST TO EXIT SWITCH / SENSOR SHUNTS DOOR FORCED OPEN IN ACCESS CONTROL SYSTEM. INTERIOR ACTUATOR TO START OPENING CYCLE (UNLESS ADD IS POWERED OFF) EXTERIOR ACTUATOR TO START OPENING CYCLE (UNLESS ADD IS POWERED OFF) EXTERIOR ACTUATOR TO START OPENING CYCLE (UNLESS ADD IS POWERED OFF) ACTUATOR CON BE PRESSED TO START OPENING CYCLE REMOTE PUSHBUTTON TO BE WIRED TO ADDITIONAL AUX RELAY TO PREVENT DOOR FORCED ALARM. KEY OVER-RIDE WILL CAUSE DOOR FORCED EVENT IN ACCESS CONTROL SYSTEM. FREE EGRESS AT ALL TIMES.

Copyright 2021 Schlage Lock Company LLC.

03-15-2021

CALI

NTS

1

Wiring Diagram Terms of Use: This information is for professional use only and is intended to be a guide for proper product application and specification. See specific

qualified to perform electrical work and in compliance with applicable codes, rules, regulations and orders. Allegion reserves the right to change or modify the information herein without notice. No warranties, express or implied, are provided by Allegion as a result of this information. Any and all use and reproduction of the information

herein except for product application and specification is expressly forbidden.

product manuals for proper installation. Any installation should be performed by persons

ELECTRIFIED

ELEVATION

DRAWINGS