

ALL MOUNTING HEIGHTS AS SHOWN COORDINATE MOUNTING LOCATIONS WITH ELECTRICAL/ARCHITECTURAL PLANS ANY DEVIATION FROM HARDWARE SPECIFIED IN SECTION 08710 WILL NEGATE ALL REQUIREMENTS SHOWN HEREIN AND REQUIRE NEW DRAWINGS BY OTHERS TO MATCH SUBSTITUTED HARDWARE

## OPERATIONAL DESCRIPTION:

DOR NORMALLY CLOSED AND LOCKED. ENTRY BY VALID CREDENTIAL AT CARD READER OR BY KEY OVER-RIDE. RX SWITCH / MOTION SENSOR SHUNTS DOOR FORCED OPEN IN ACCESS CONTROL SYSTEM. INTERIOR ACTUATOR TO START OPENING CYCLE (UNLESS ADD IS POWERED OFF) EXTERIOR ACTUATOR WIRED IN SENES THROUGH LX SWITCH IN EXIT DEVICE SUCH THAT ON VALID CARD OR TIME ZONE CONTROL ACTUATOR CAN BE PRESSED TO START OPENING CYCLE KEY OVER-RIDE WILL CAUSE DOOR FORCED EVENT IN ACCESS CONTROL SYSTEM. FREE EGRESS AT ALL TIMES. intended to be a guide for proper product application and specification. See specific product manuals for proper installation. Any installation should be performed by persons qualified to perform electrical work and in compliance with applicable codes, rules, regulations and orders. Allegion reserves the right to change or modify the information herein without notice. No warranties, express or implied, are provided by Allegion as a result of this information. Any and all use and reproduction of the information herein except for product application and specification is expressly forbidden. Copyright 2021 Schlage Lock Company LLC.

Wiring Diagram Terms of Use: This information is for professional use only and is

ELEVATION

DRAWINGS

CALI

NTS