

## <u> Important – Read This First</u>

- Always refer to manufacturer instructions, this drawing is a recommendation and site characteristics vary.
- Some adjustment of the timing will be necessary by adjusting the potentiometers, installing the device at default values will result in errors.
- Read and follow instructions for separate power supply that is specific to the electrified panic bar
- All cables to the latch retraction bar must be routed through some sort of hinge transfer: armored cable, morticed pivot transfer, or electrified hinge transfer.

##