

**CASEMENT ADJUSTER**


FOR USE WITH SINGLE OR DOUBLE WOOD CASEMENT WINDOWS, AWNING WINDOWS, ROOFTOP HATCHES, STORAGE CHESTS AND DRAWING TABLES. PROVIDES SMOOTH, EASY OPENING AND LOCKING, IN ANY POSITION.

**INSTALLATION INSTRUCTIONS**


- TOOLS REQUIRED:** Drill, 1/8" drill bit, Phillips screwdriver,awl or pencil.
1. Position casement adjuster on window sill flush to bottom rail, leaving ball end or rod a minimum 1/2" from window frame. (See illustration 1)
  2. Mark screw holes in mounting piece (A) and base (C).
  3. Remove adjuster and drill pilot holes. Pull rod (B) inward (90°) and secure mounting piece (A) to window and base (C) to sill.

**NOTE:** To keep in desired open position, tighten knob.


For other applications see illustrations 2, 3, 4 and 5.

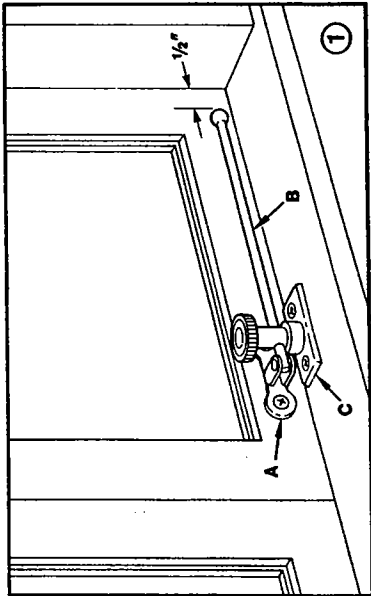


ASK FOR OTHER FINE HARDWARE BY H.B. IVES

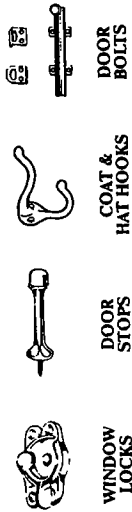


MADE IN TAIWAN

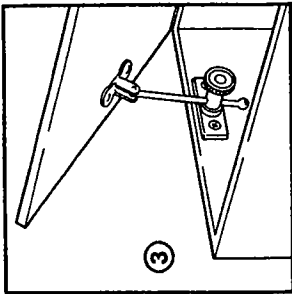


STORAGE CHEST

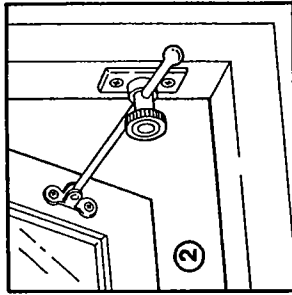

AWNING WINDOW

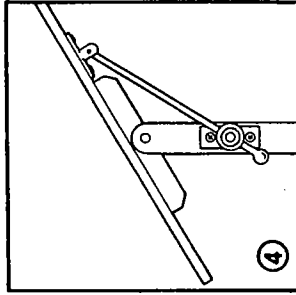

DRAWING TABLE

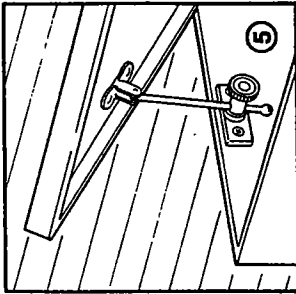

HATCH



CASMET ADJUSTER 10" CT1B3 BRASS

**71 -  
CASEMENT  
ADJUSTER**