

P513-734

Small Format Interchangeable Core Mortise Cylinder



Installation Instructions

1 To Install Core

With control key fully inserted, push core into cylinder housing, rotate key 15° to the right and insert core completely. Rotate key back to the upright position and remove control key.



 
2 To Remove Core

 
Insert control key and rotate 15° to the right until action stops. Pulling on the key will now extract core from housing.



3 To Install Completed Unit

Screw threaded mortise cylinder into lock unit to proper length for door installation utilizing enclosed blocking ring. Keyway of cylinder must be vertical as shown.







© Allegion 2014 Printed in U.S.A. P513-734 Rev. 01/14-c