

For 44 and 88 Rim Devices

941015-00

Cylinder Preparation


VON DUPRIN

Installation Instructions

- **1.** Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
- **2.** Prepare door for cylinder:
 - **A.** Transfer line X-X from inside (exit device side) of door to outside (cylinder side) of door. Use extra care if edge of door is beveled. Make sure line X-X is parallel to edge of door.
 - **B.** Locate and prepare all holes as shown.
- 3. Apply cylinder.
- **4.** Cut cylinder tailpiece to extend beyond inside face of door by amount listed:

44 Rim...... 5/8" to 3/4" 88 Rim...... 5/8" to 3/4"

- **5.** Apply exit device:
 - **A.** Remove key from cylinder.
 - **B.** Attach lock stile case to door.
 - **C.** Test key action.

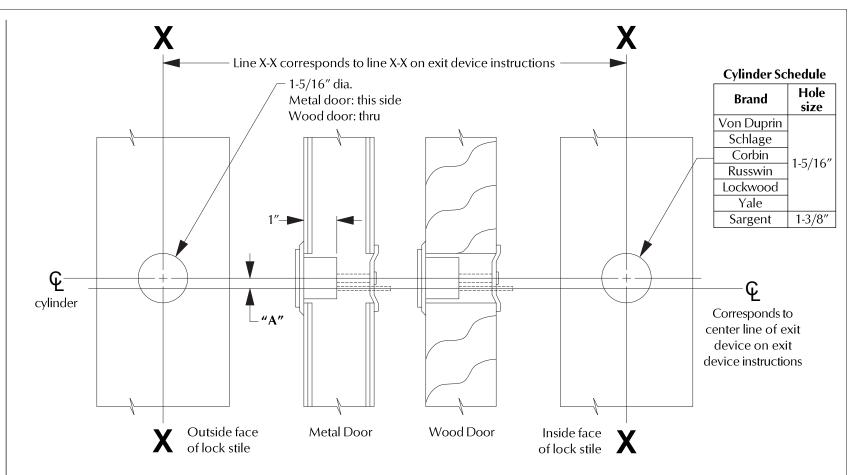

Device Application Schedule

Device	Dimension "A"
44 Rim	1/4"
88 Rim	1/4"

LHR shown, RHR opposite
For cutouts on inside face of door, see exit device instructions