



030216-000-70


LM Series Locks

Trim and Cylinder Attachment

FALCON[®]

Installation Instructions


TRIM AND CYLINDER ATTACHMENT INSTRUCTIONS FOR LM SERIES LOCKS WITH ESCUTCHEON TRIM

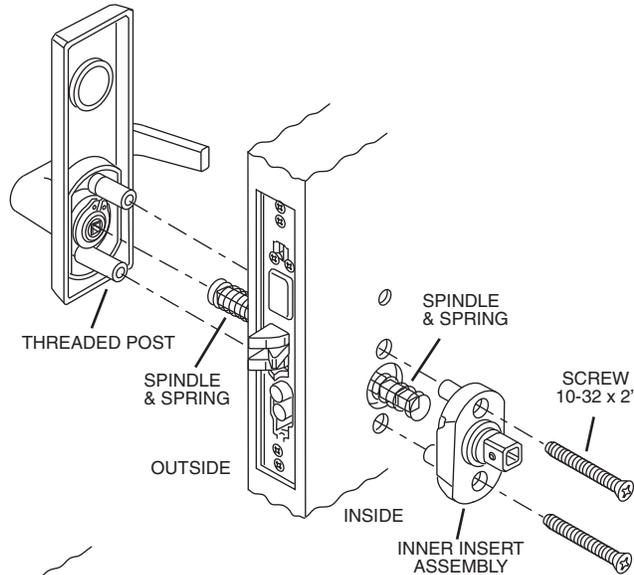

STEP ONE:


A. Insert inner and outer spindle and spring assemblies into lock hubs. Place outer trim assembly over spindle and spring assembly.

B. Place inner insert assembly over inner spindle and spring assembly. Put screws through insert and thread into posts of outer trim until tight.

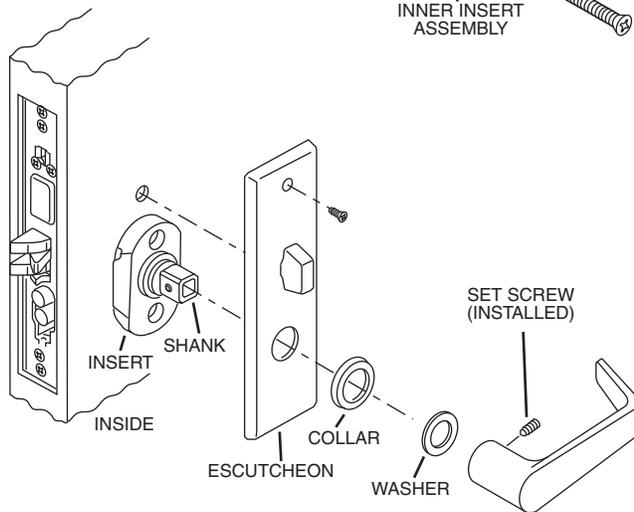

STEP TWO:

Place escutcheon over insert, thread on collar, align to door and tighten collar with spanner wrench. Place washer over outside of shank. Put lever on shank and pressing toward door, tighten set screw in lever tight.

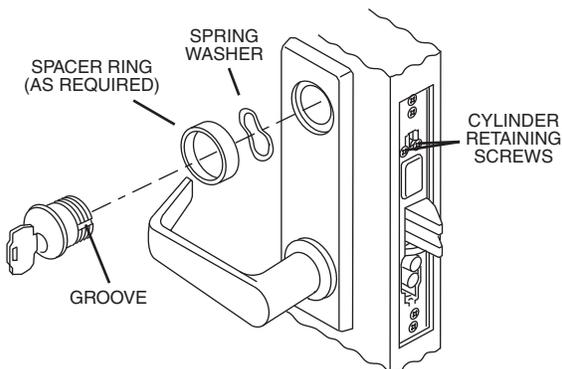

STEP THREE:

Install cylinder if required. Loosen cylinder retaining screw sufficiently to allow cylinder to be threaded into lock case. Keyway must end up on bottom of cylinder housing. Secure cylinder by tightening retaining screw into groove on side of cylinder.

NOTE: For double cylinder, same as above.

CAUTION! If first cylinder is installed too far into case, second cylinder cannot be properly installed.

Double cylinder locks have outside cylinder indicated by label attached.




Customer Service

1-877-671-7011

www.allegion.com/us

© Allegion 2014
Printed in U.S.A.
030216-000-70 Rev. 10/14-d


TRIM AND CYLINDER ATTACHMENT INSTRUCTIONS FOR LM SERIES LOCKS WITH SECTIONAL TRIM

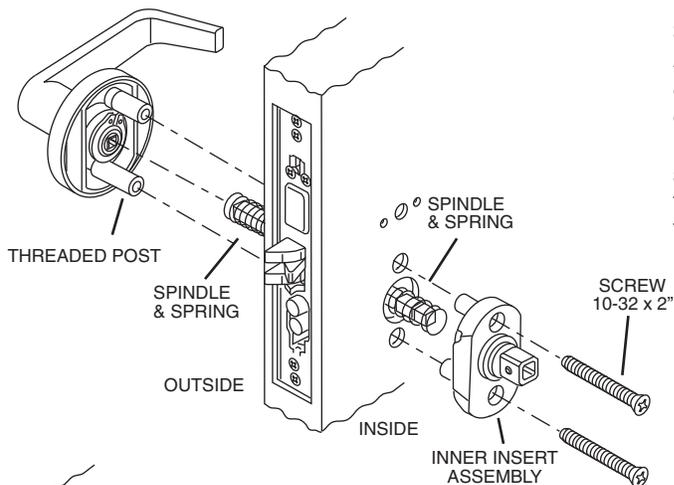

STEP ONE:


A. Insert inner and outer spindle and spring assemblies into lock hubs. Place outer trim assembly over spindle and spring assembly.

B. Place inner insert assembly over inner spindle and spring assembly. Put screws through insert and thread into posts of outer trim until tight.

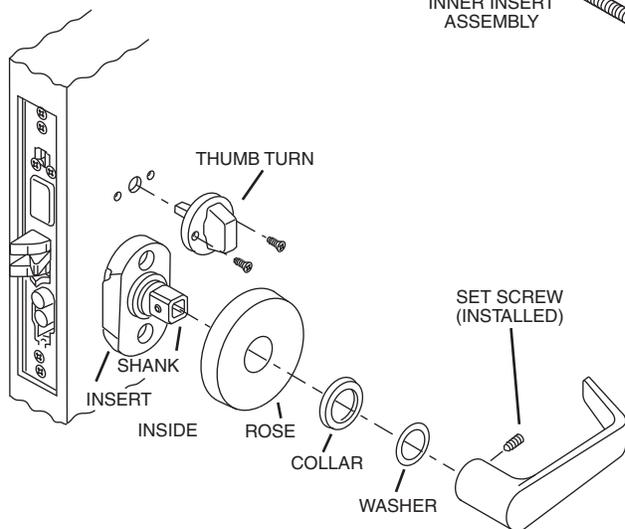

STEP TWO:

Place rose over insert, thread on collar and tighten with spanner wrench. Place washer over outside of shank. Put lever on shank and pressing toward door, tighten set screw in lever tight.

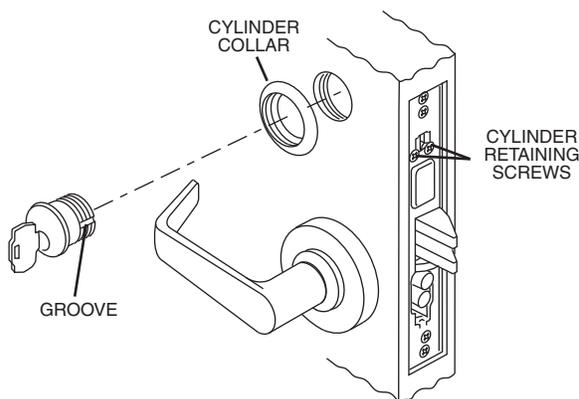


STEP THREE:

Install cylinder if required. Loosen cylinder retaining screw sufficiently to allow cylinder to be threaded into lock case. Keyway must end up on bottom of cylinder housing. Secure cylinder by tightening retaining screw into groove on side of cylinder.


NOTE: For double cylinder, same as above.

CAUTION! If first cylinder is installed too far into case, second cylinder cannot be properly installed.

Double cylinder locks have outside cylinder indicated by label attached.

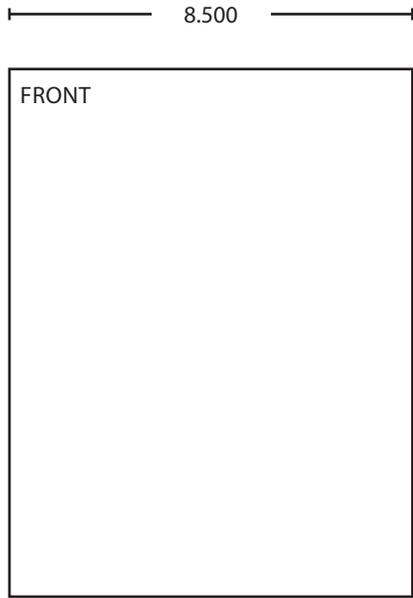

BEGINNING SHEET

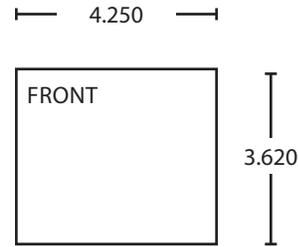

FOLDED SHEET

Additional Notes:
1. None

Revision History						Revision Description: D > Revised artwork					
A	B	C	D	E	F						
4955-398	0790	6530									
Material						Edited By		Approved By		EC Number	Release Date
White Paper						J. Ellis		M. Roberts		xxxxx	10/14
Notes 1. printed two sides 2. printed black 3. tolerance ± .13 4. printed in country may vary 5. drawings not to scale 6. Barcode shows after folding						Title					
						Trim and Cylinder Attachment, LM Series Locks					
						Creation Date		Number			Revision
						10-22-14		030216-000-70			D
						Created By		Activity		© Allegion 2014	
						J. Ellis		3899 Hancock Expwy Security, CO 80911			
						Software: InDesign CS6					