



23762

# Control Box




Models 7902 SEQ & ES7902 SEQ


Installation Instructions

① For closer information see closer installation instruction sheet

## Typical Electric & Air Supply Hook Up

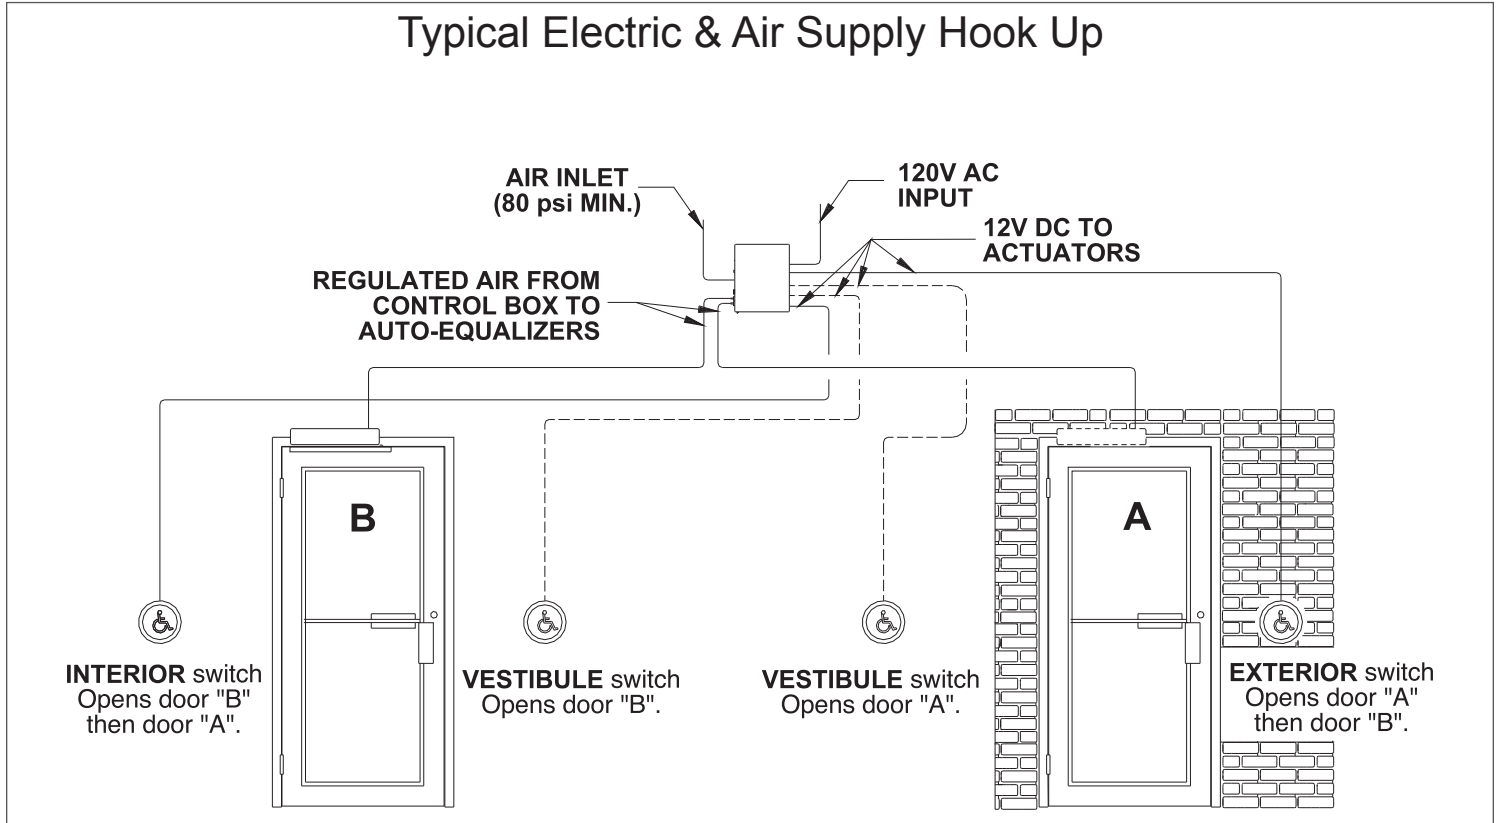

<p>1 Locate box on interior of building within 100 tubing feet of the door to be controlled. <b>Box must be in a clean, dry, well ventilated place where temperatures do not exceed 120°F or fall below 35°F.</b></p>	<p>6 Air pressure output valve has been preset at factory. If more air pressure is required to adequately open doors, adjust regulator valves found inside control box.</p>
<p>2 Mount box to a structurally sound surface using screws provided as shown on page 2 with air fittings on left side as shown. <b>Do not mount box upside down or on a horizontal plane.</b></p>	<p>7 Adjust time delay to keep air valve energized by turning adjustment wheel on timer modules "A" &amp; "B" (CW to increase - CCW to decrease). The LED (light) on the timer module indicates the valve is energized. The time can be adjusted from 0-30 seconds. 10 seconds is a "normal" delay.</p>
<p>3 Refer to instructions packed with actuators and connect leads to terminals 5 through 10 as required.</p>	<p>8 When using sequential operation, adjust dual timer module "S" for desired delay between door operation. (CW to increase delay; CCW to decrease delay). Top timer delays "A" to "B" operation; the bottom timer delays "B" to "A" operation.</p>
<p>4 Connect unpowered 120V AC input to terminals 3, 4, and ground screw. (Line side to terminal 3, neutral side to terminal 4 and ground wire to ground screw). If door control is on a fire door, 120V AC input must be interrupted by the fire alarm panel when in alarm. When dry auxiliary fire alarm contacts are used, remove shunt from terminals 1 and 2 and connect to dry contacts of fire detector or alarm panel. Terminals 1 and 2 are in series with line side of 120V input.</p>	<p>9 Test actuators to ensure wiring and tubing are properly connected.</p>
<p>5 Turn on power. Air valve will operate one cycle when power is applied.</p>	

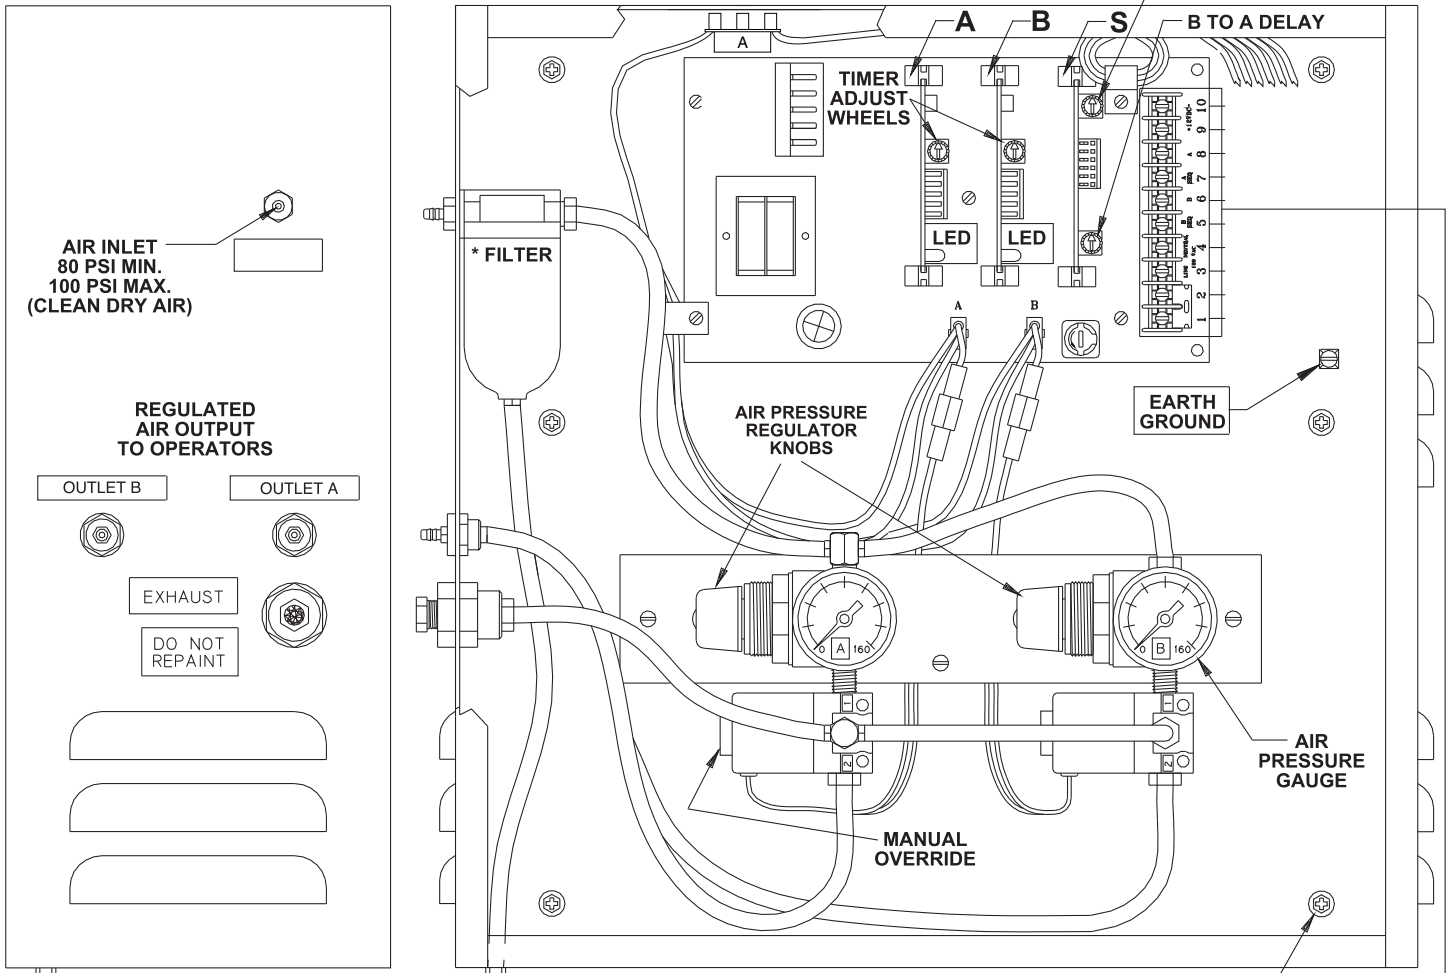

INSTALL BOX WITH SIX TAPCON CONCRETE SCREWS - 3/16 x 1/4 DRILL 5/32 HOLE 1 1/4" DEEP WITH CARBIDE TIPPED CONCRETE BIT

**WARNING**

HAZARDOUS VOLTAGE CAN SHOCK AND CAUSE SEVERE INJURY

Disconnect power before making any electrical connections or performing maintenance.

**ELECTRICAL DATA**

INPUT = 120V AC @ .3 AMPS

POWER CONSUMPTION 36 WATTS


OUTPUT IS 12V DC

**CAUTION**

DO NOT MOUNT BOX UPSIDE DOWN OR IN HORIZONTAL POSITION. LOCATE WHERE TEMPERATURES DO NOT EXCEED 120°F OR FALL BELOW 35°F

**AIR FILTER MAINTENANCE:**

- EACH TIME BOWL IS CLEANED OR FILTER ELEMENT REPLACED:**
  - Depressurize unit
  - Inspect seals and replace cracked, deteriorated or damaged seals with original manufacturers approved seals only.
- FILTER ELEMENT** - Clean periodically by removing filter, tapping on hard surface and blowing off with compressed air. When servicing element, blow off louvers with compressed air.
- AUTOMATIC DRAIN** - If automatic drain fails to keep filter bowl drained of water, use a pencil or small screwdriver to push the piston up, allowing filter to drain.
- Be sure filter bowl assembly is firmly secured in place before reactivating unit.
- Replace filter with LCN part # 929.

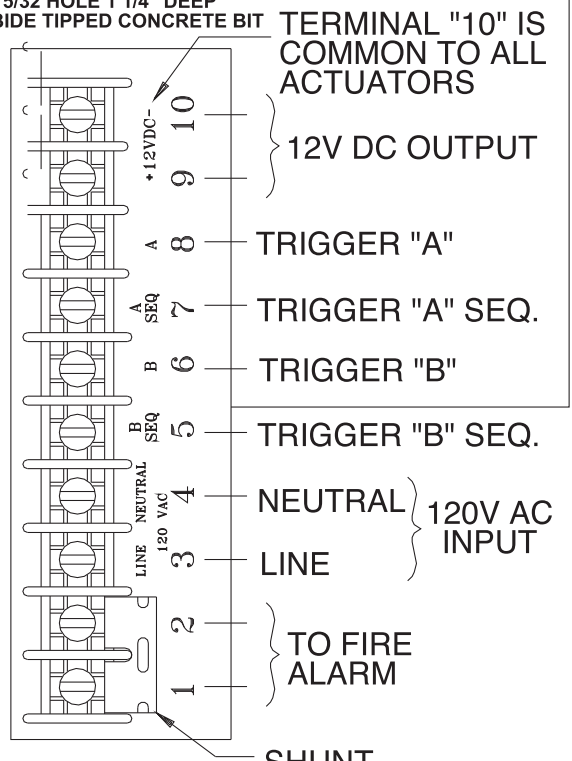

**SHUNT**

\* REMOVE THIS SHUNT ONLY WHEN CONNECTING TO NORMALLY CLOSED FIRE ALARMS CONTACTS


**DANGER** CONTROL BOX **MUST** BE CONNECTED TO EARTH GROUND

# Installation Troubleshooting Chart

Symptom	Possible Cause	Suggested Remedy
No Power Opening.	No power to control box/blown fuse.	Verify 120VAC 60HZ power is present at terminals 3 & 4 on control box terminal strip. Check fuse. Replace only with 5 amp (3AG type) fuse.
	Actuator(s) not connected properly.	Be sure a timer module board is firmly in place in "A," "B" & "S" slots. Operate actuator(s). LED on timer module should light when actuator is used. If not, briefly short actuator terminal in the control box. If LED lights, check wiring to actuators for an open circuit. If it does not light, check for voltage at terminals 9 & 10. Voltage should read from 11.75 to 13.25V DC. If there is no reading, disconnect leads from terminals 9 & 10. Short actuator terminals. If LED lights, check for short circuit in actuators.
	Fire alarm system causing open circuit on terminals 1 & 2.	Shunt terminals 1 & 2 with power off. Restore power. If control operates when actuator terminals in the control box are shorted, an open circuit exist in wiring to fire alarm. When Auto-Equalizer is not used with fire alarms, terminals 1 & 2 must be permanently shorted with a shunt.  <b>IMPORTANT!</b> When Auto-Equalizer is connected to fire alarm, make sure shunt is removed from terminals 1 & 2. Terminals 1 & 2 are one leg of 120V line.
	No input to Auto-Equalizer operator.	Disconnect tubing from Auto-Equalizer operator. Try actuator and verify that air is coming out of tubing. If not, trace tubing to control box, checking for breaks or kinks in air line.
	Air lines obstructed with dirt or ice.	Clean or thaw lines and reroute if necessary. Eliminate dips near cold zones. If freezing is a repeated problem, desiccant filter may need to be changed.
	Air valves not working.	Make sure air valve leads are plugged into main board. (Be sure valves in system are plugged into connectors "A" & "B".)
	Low or no air inlet pressure to control box.	Check compressor output to make sure air shut-off is open. 80 psi must be available at the control box. If not, check compressor and lines.
	No air output to Auto-Equalizer operator.	Check pressure gauge in control box. Adjust as required, if necessary. Check for leaking or damaged lines in control box.
Power opening will not time out.	Scanner maintaining signal to control box.	Make sure lenses are clean and there are no obstructions in front of scanner. Model 909 or 939 proximity scanner may "see" an opposite wall. Adjust range as described earlier.
	Switch circuit maintaining contact.	Check for short circuit or error in wiring to actuator.
	Air valve blocked open with contaminant.	Cycle valve several times by momentarily shorting actuator terminals. This should clear valve.
	Control box exhaust restricted.	Exhaust muffler may be clogged. Clean in alcohol or mineral spirits.

# Model ES7902 SEQ. for use with Electric Latching Hardware

ES7902 SEQ. - 2 electric strikes maximum

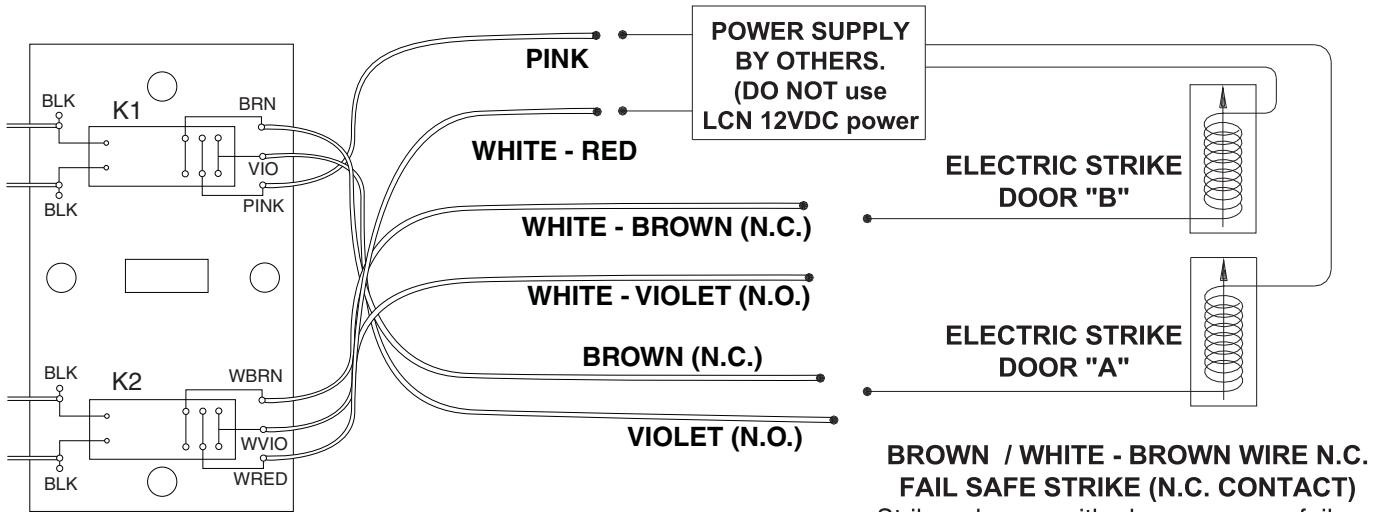

**BROWN / WHITE - BROWN WIRE N.C.  
FAIL SAFE STRIKE (N.C. CONTACT)**  
Strike releases with alarm or power failure.  
Remains latched with power on.  
(Not compatible with UL listed fire door.)

**VIOLET / WHITE - VIOLET WIRE N.O.  
FAIL SECURE STRIKE (N.O. CONTACT)**  
Strike releases when energized. Remains locked in  
alarm or power failure. (Manual release hardware  
required to open door in alarm or power failure.)

**⚠ WARNING**

**HAZARDOUS VOLTAGE  
CAN SHOCK AND  
CAUSE SEVERE INJURY**

Disconnect power before  
making any electrical  
connections or performing  
maintenance.

**Customer Service**

1-877-671-7011 [www.allegion.com/us](http://www.allegion.com/us)



© Allegion 2014  
Printed in U.S.A.  
23762 Rev. 05/14-e