

Additional Notes:
None

 
Revision History						Revision Description:					
A	B	C	D	E	F	C > Allegion Rebranding					
	20156	062621	EC #	EC #	EC #						
Material						Edited By		Approved By		EC Number	Release Date
White Paper						R. Byun		M. Roberts		062621	05-14-2015
Notes						Title					
<ol style="list-style-type: none"> printed one side printed black tolerance: ± .13 see sheet 2 for artwork printed in country may vary drawings not to scale 						DC-104 Installation Instruction					
Creation Date			Number			Revision					
08-29-11			70200-0063			C					
Created By			Activity								
J. Ellis			3899 Hancock Expwy								
Software: Illustrator CS6			Security, CO 80911						Allegion Copyright © 2015		



70200-0063

DC-104

Installation Instructions

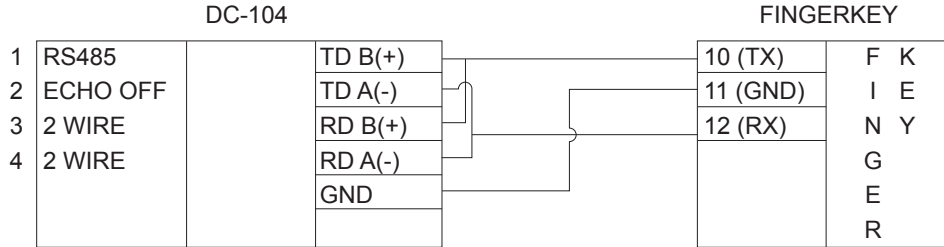

DIP switches on the DC-104 need to be set as follows:

1. RS485
2. Echo off
3. 2 wire
4. 2 wire

SW1 DIP Switch on the FingerKey needs to be set as follows:

1. ON
2. ON
3. OFF
4. OFF

- Jumper needs to be installed between the TD B(+) and RD B(+)= TD/RD(+)
- Jumper needs to be installed between the TD A(-) and RD A(-)= TD/RD(-)
- The TD/RD(+) on the DC-104 connects to terminal #10(TX) of the FingerKey.
- The TD/RD(-) on the DC-104 connects to terminal #12(-) of the FingerKey.
- The GND on the DC-104 connects to terminal #11(Ground) of the FingerKey.

Customer Service	
1-877-671-7011	www.allegion.com



© Allegion 2015
Printed in U.S.A.
70200-0063 Rev. 05/15-c