



376-T, 376-T-BE


VON DUPRIN®

941148-00

Control for Metal Door Application

Installation Instructions

1. Prepare door for exit device. See exit device instructions for locations of holes, backset (line X-X), and center lines.
2. Prepare door for control:
 - A. Transfer line X-X from inside (exit device side) of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
 - B. Locate and prepare holes as indicated.
3. Reverse cam on back of control if reqd. (see Figure 1 on backside of sheet).
4. Install rod member (Figure 2):
 - A. Slip top rod assembly in door until bottom of rod is visible in control cutout.
 - B. Slip rod member on top rod according to handing of door. Keep rod member visible in cutout and lower top rod assembly until latch release is in position on latch release reinforcement. Slightly tighten socket set screws in rod member to maintain this position.
 - C. Install and adjust top and bottom rod assemblies. See installation instructions for vertical rod device.
 - D. Adjust member so that the bottom surface is 1/8" below the centerline of thumbturn. Secure rod member by tightening socket set screws.
5. Complete the device installation.
6. Install cylinder if required (Figs. 3 & 4). Insure cylinder cam is set for required function and replace if necessary.
7. Retract latch bolts by depressing device crossbar.
8. Apply control and test key, control, and device action.

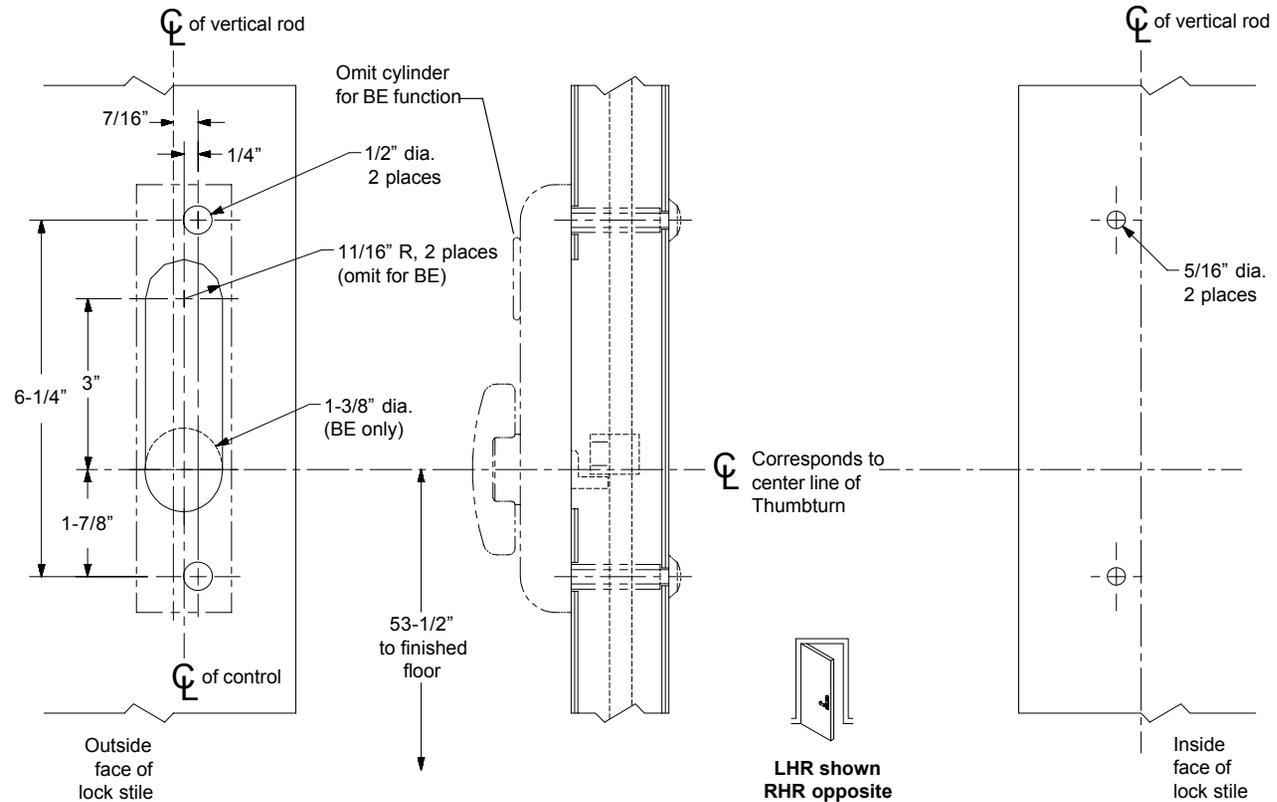


For cutouts on inside face of door see instructions in device carton	Device Application Schedule
	5547-F Vertical Rod Exit Device
	8847-F Vertical Rod Exit Device

Customer Service

1-877-671-7011 www.allegion.com/us



© Allegion 2014
 Printed in U.S.A.
 941148-00 Rev. 01/14-b

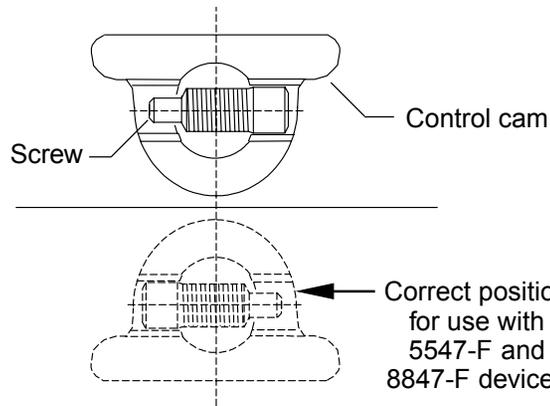

Control cam reversing procedure if required

Remove screw and rotate control cam 180 degrees to position shown and reinstall screw

Figure 1


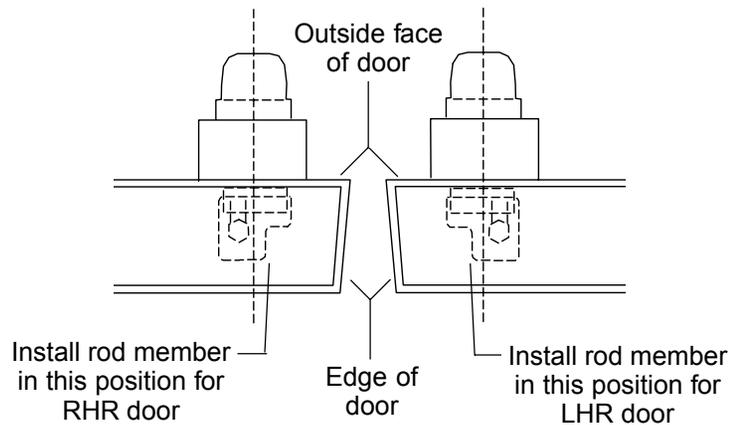


Figure 2

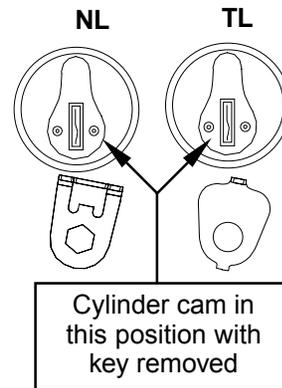

TL Function - Control remains unlocked when key is removed.

NL Function - Control locks when key is removed. Requires use of key to operate.

For NL function replace TL cylinder plate (std. on all controls) with NL cylinder plate (included in polybag) replacing screw and washer.

Note: Control must be in locked position when installing cylinder plate.

Figure 3

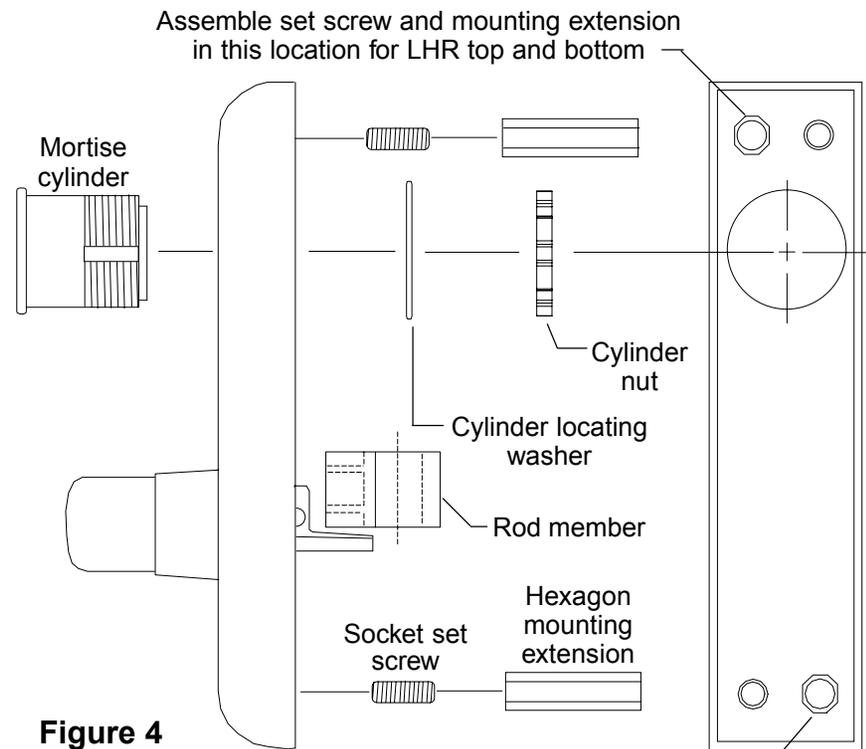


Figure 4