



921010-00

Lever Control


# LP373L/L-BE

# VON DUPRIN®

Installation Instructions

### SKIP STEPS 1, 2, AND 3 FOR L-BE VERSION.


1. Remove back plate.

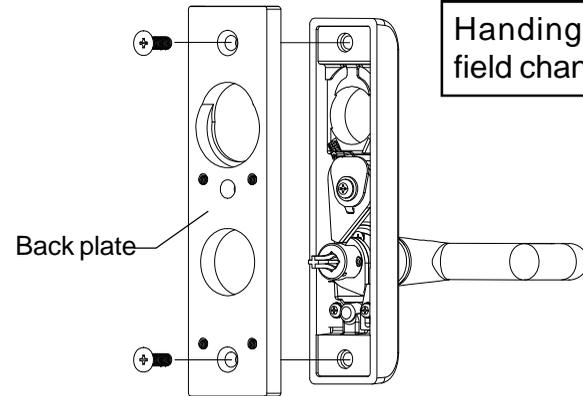

**NOTE**  
Handing is not field changeable.

2. For NL function, remove TL cylinder plate and install NL cylinder plate (skip this step for L version using TL function).

TL cylinder plate (control remains unlocked when key is removed; factory setting)

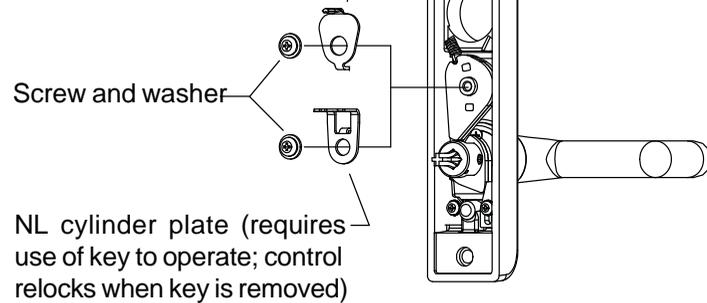


Screw and washer

NL cylinder plate (requires use of key to operate; control relocks when key is removed)


3. Install key cylinder as shown, then install the back plate that was removed in Step 1.

**NOTE**  
When using NL cylinder plate: Make sure NL cylinder plate is in locked position (so lever cannot turn) before installing key cylinder.

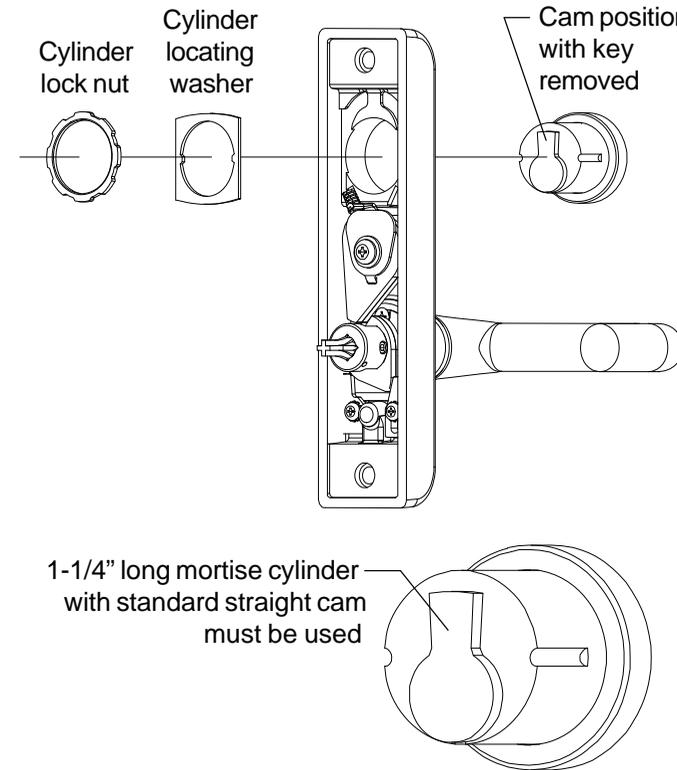


1-1/4" long mortise cylinder with standard straight cam must be used

4. Prepare door for lever control installation.

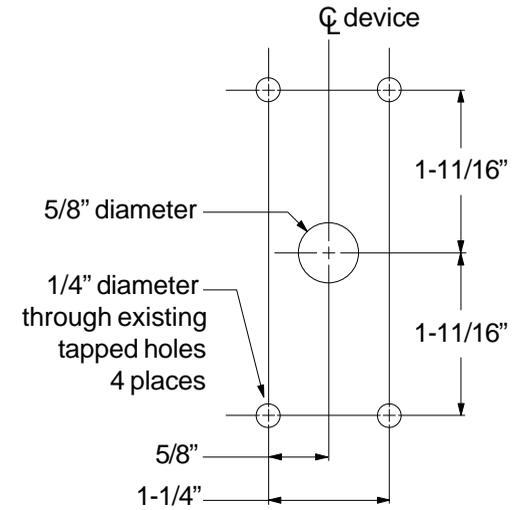

5. Install lever control and device (see device instructions).

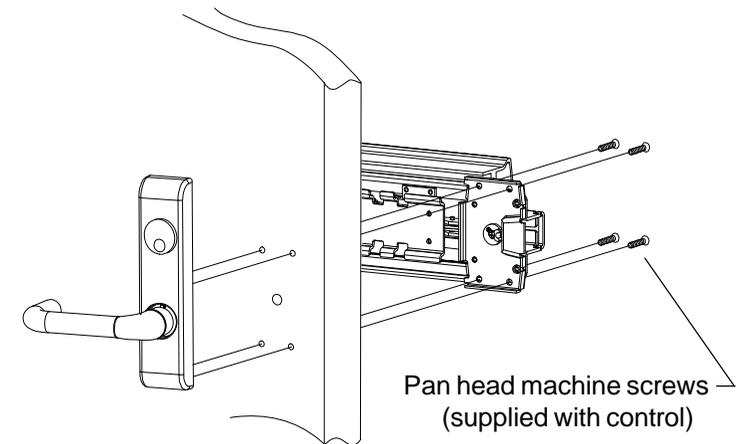

Pan head machine screws (supplied with control)

Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2014  
Printed in U.S.A.  
921010-00 Rev. 10/14-b