

COORDINATE MOUNTING LOCATIONS WITH ELECTRICAL/ARCHITECTURAL PLANS ANY DEVIATION FROM HARDWARE SPECIFIED IN SECTION 08710 WILL NEGATE ALL REQUIREMENTS SHOWN HEREIN AND REQUIRE NEW DRAWINGS BY OTHERS TO MATCH SUBSTITUTED HARDWARE

OPERATIONAL DESCRIPTION:

DOR NORMALLY CLOSED AND LOCKED. ENTRY BY VALID CREDENTIAL AT CARD READER OR BY KEY OVER-RIDE. RX MOTION SENSOR SHURTS DOOR FORCED OPEN IN ACCESS CONTROL. SYSTEM. INTERIOR ACTUATOR TO START OPENING CYCLE (UNLESS ADD IS POWERED OFF) EXTERIOR ACTUATOR WIRED IN SERIES THROUGH LX SWITCH IN EXIT DEVICE SUCH THAT ON VALID CARD OR TIME ZONE CONTROL ACTUATOR CAN BE PRESSED TO START OPENING CYCLE KEY OVER-RIDE WILL CAUSE DOOR FORCED EVENT IN ACCESS CONTROL SYSTEM. FREE EGRESS AT ALL TIMES.

Wiring Diagram Terms of Use: This information is for professional use only and is
intended to be a guide for proper product application and specification. See specific
product manuals for proper installation. Any installation should be performed by persons
qualified to perform electrical work and in compliance with applicable codes,
rules, regulations and orders. Allegion reserves the right to change or modify the
information herein without notice. No warranties, express or implied, are provided by
Allegion as a result of this information. Any and all use and reproduction of the information
herein except for product application and specification is expressly forbidden.
nerent except for product application and specification is expressly forbidden.

CALE

Copyright 2021 Schlage Lock Company LLC.

NTS

DRAWINGS