



## DOOR HARDWARE

- JUNCTION BOX BY OTHERS
- SCHLAGE 679-05 DOOR POSITION SWITCH
- VON DUPRIN LX-QEL / FALCON LM-MEL FIRE RATED EXIT DEVICE (24 VDC)
- SCHLAGE MT11 OR MT15
- SCHLAGE SCANII RX MOTION SENSOR
- LCN AUTO EQUALIZER AUTO DOOR OPERATOR
- LCN SINGLE GANG BOX WIRED ACTUATORS
- VON DUPRIN PS902 X 900-2RS X 900-FA
- VON DUPRIN EPT10 OR EQUAL

## WIRE REQUIREMENTS

2/20 AWG STRANDED FOR DPS

4/18 AWG STRANDED FOR EXIT DEVICE

2 WIRES FOR POWER

2 WIRES FOR LX / LM SWITCH 4/18 AWG STRANDED FOR MOTION SENSOR

2 WIRES FOR POWER
2 WIRES FOR REQUEST TO EXIT SIGNAL
2/20 AWG STRANDED FROM INTERIOR ACTUATOR DIRECT TO SLOT 17/18 2/20 AWG STRANDED FROM EXTERIOR ACTUATOR TO 16/17. ONE LEG

TO BE WIRED IN SERIES WITH N/O AUX RELAY CONTACT

\*\*WIRE LOW ACTUATOR IN PARALLEL WITH ACTUATOR ABOVE\*\*
2/20 AWG STRANDED FROM SLOT 22/23 TO POWER SUPPLY RELAY

8/22 AWG SHEADED TO CARD READER. VERIFY
REQUIREMENTS W/ CARD READER MANUFACTURER.
PLENUM RATED CABLE FROM ACCESS PANEL TO J—BOX
INTEGRATOR TO VERIFY REQUIREMENTS AND PROVIDE
AS REQUIRED FOR SYSTEM DESIGN.

\*\*ANY WIRE RUNS GREATER THAN 200 FEET VERIFY GAUGE WITH MANUFACTURER.\*\*

## GENERAL NOTES:

ALL LOW VOLTAGE WIRE TO RUN IN MINIMUM 3/4" CONDUIT OR INSIDE DRYWALL UNLESS NOTED OTHERWISE

ALL LOW VOLTAGE WIRE TO BE STRANDED WIRE

ALL GANG BOXES BY ELECTRICAL CONTRACTOR AS REQUIRED ALL LOW VOLTAGE WIRING TO BE LABELED CLEARLY AT BOTH END ALL MOUNTING HEIGHTS AS SHOWN

COORDINATE MOUNTING LOCATIONS WITH ELECTRICAL/ARCHITECTURAL PLANS
ANY DEVIATION FROM HARDWARE SPECIFIED IN SECTION 08710 WILL NEGATE ALL REQUIREMENTS SHOWN
HEREIN AND REQUIRE NEW DRAWINGS BY OTHERS TO MATCH SUBSTITUTED HARDWARE

## OPERATIONAL DESCRIPTION:

DOOR NORMALLY CLOSED AND LOCKED.

ENTRY BY VALID CREDENTIAL AT CARD READER OR BY KEY OVER-RIDE.

RX MOTION SENSOR SHUNTS DOOR FORCED OPEN IN ACCESS CONTROL SYSTEM.

 
INTERIOR ACTUATOR TO START OPENING CYCLE (UNLESS ADD IS POWERED OFF)

EXTERIOR ACTUATOR WIRED IN SERIES THROUGH LX SWITCH IN EXIT DEVICE SUCH THAT ON VALID CARD OR TIME ZONE CONTROL

ACTUATOR CAN BE PRESSED TO START OPENING CYCLE

KEY OVER-RIDE WILL CAUSE DOOR FORCED EVENT IN ACCESS CONTROL SYSTEM.

FREE EGRESS AT ALL TIMES.



Wiring Diagram Terms of Use: This information is for professional use only and is intended to be a guide for proper product application and specification. See specific product manuals for proper installation. Any installation should be performed by persons qualified to perform electrical work and in compliance with applicable codes, rules, regulations and orders. Allegion reserves the right to change or modify the information herein without notice. No warranties, express or implied, are provided by Allegion as a result of this information. Any and all use and reproduction of the information herein except for product application and specification is expressly forbidden.

Copyright 2021 Schlage Lock Company LLC.