



47260191

218 Series Pull Plate Trim


For use with Economy Type Exit Devices

Installation Instructions

Install Cylinder


- · For dummy pull plate, skip to steps for "Install Pull Plate".
- 1. Use template to mark hole locations on door. If all holes have been drillled or cut, see next step to install cylinder.
- 2. Install rim cylinder through provided cylinder collar.
- 3. Insert the rim cylinder through hole in pull plate, and insert cylinder retaining cup from the back side of the pull plate.
- 4. Fasten rim cylinder assembly using two break-off screws provided.

Note: The thinner cylinder collar provided with the rim cylinder is for use with cylinders purchased from competitor cylinder suppliers.

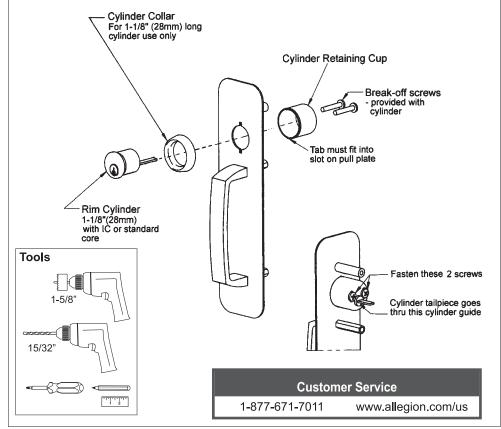

Install Pull Plate

- 1. Insert pull plate assembly on the door.
- 2. The rim cylinder tailpiece should insert into the exit device cam approximately 7/16" (11 mm). If the tailpiece is too long and extends beyond the inside face of the door, carefully measure and mark at the closest break-off line. Then use pliers to break the tailpiece to the appropriate length.
- 3. Fasten pull plate and exit device using the three (3) mounting screws provided.

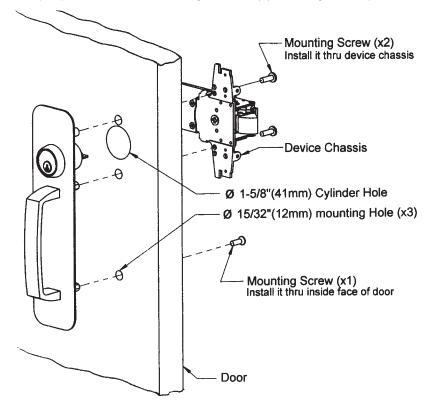



© Allegion 2017 Printed in U.S.A. 47260191 Rev. 12/17-a