


FALCON[®]

RE-HANDING INSTRUCTIONS FOR LM SERIES LOCK TRIM


Example shown is a right hand being changed to a left hand
Reverse sequence to change from left to right hand

Note: Inside trim is always opposite the outside trim



VIEWED FROM OUTSIDE

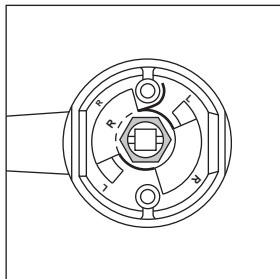


1. Holding lever as shown, bend tab of lockwasher back flat. Remove nut.

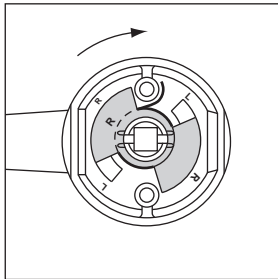


2. Holding lever securely, rotate rose assembly clockwise slightly, and remove plate and lockwasher.

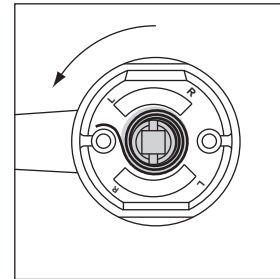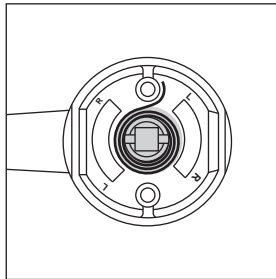


3. Using caution, allow rose assembly to rotate counter-clockwise to relieve spring tension.

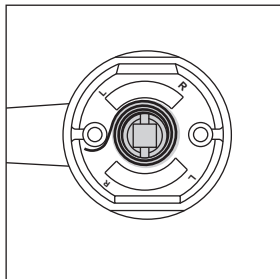


4. Remove spring and reinstall with spring hook on opposite side of post.

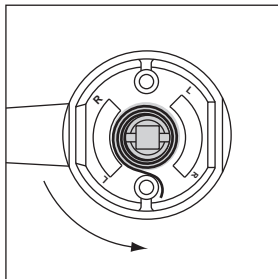

5. Holding lever securely, rotate rose assembly counterclockwise slightly past 90 deg.

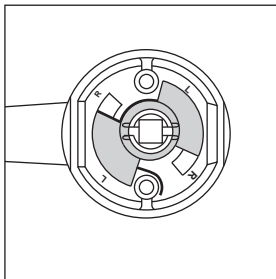

6. Reinstall plate with "L" side up and in line with "L" on rose assembly.

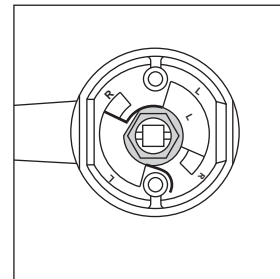

7. Reinstall lockwasher and nut. Tighten nut and then back off slightly until rose assembly rotates freely under plate. Bend up one tab of lockwasher against nut.



ALLEGION

© Allegion 2014
Printed in U.S.A.
030253-000-70 Rev. 10/14-d

8.500



5.500

BEGINNING SHEET

Additional Notes:
1. None

Revision History						Revision Description:				
A	B	C	D	E	F	D > Revised artwork				
5440	0790	6683								
Material						Edited By	Approved By	EC Number	Release Date	
White Paper						J. Ellis	M. Roberts	xxxxx	10/14	
Notes						Title				
1. printed one side						Rehanding Instructions, LM Series Lock Trim				
2. printed black						Creation Date	Number		Revision	
3. tolerance ± .13						10-22-14	030253-000-70		D	
4. printed in country may vary						Created By	Activity			
						J. Ellis	3899 Hancock Expwy			
						Software: InDesign CS6	Security, CO 80911		© Allegion 2014	