


## Interchangeable Core Mortise Cylinder



Installation Instructions


## To Install Core


With control key fully inserted, push core into cylinder housing, rotate key 15° to the right and insert core completely. Rotate key back to upright and remove control key.

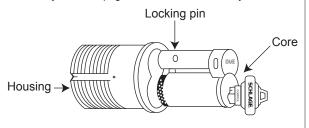

## To Remove Core

  
Insert control key and rotate 15° to the right until action stops. Pulling on key will now extract core from housing.






## To Install Completed Unit

  Screw threaded mortise cylinder into lock unit to proper length for door installation. Keyway of cylinder must be vertical as shown.





**Customer Service** 1-877-671-7011

www.allegion.com/us



© Allegion 2014 Printed in U.S.A. P509-966 Rev. 01/14-e