



# Interchangeable Core Rim Cylinder




**P509-965**

Installation Instructions

## To Remove Core

Insert control key and rotate 15° to the right until action stops. Pulling on key will now extract core from housing.

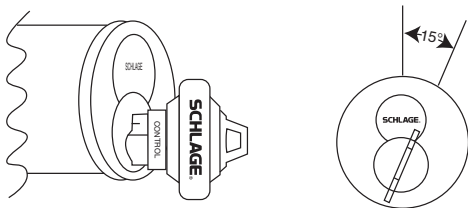


## To Rotate Cam

### Front View

A. Vertical bar installation


B. Horizontal bar installation

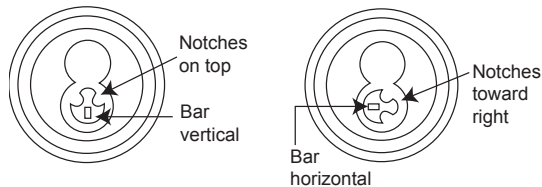

Use cylinder bar in back of housing to rotate cam for vertical or horizontal application. (Location of notches in cam determines application.)

## To Install Core

With control key fully inserted, push core into cylinder housing, rotate key 15° to the right and insert core completely. Rotate key back to upright and remove control key.

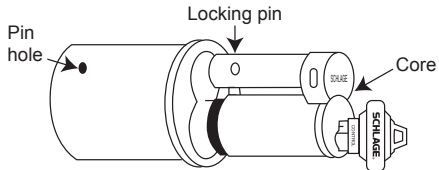


### Customer Service

1-877-671-7011

[www.allegion.com/us](http://www.allegion.com/us)

## To Install Completed Unit

Mounting screws are manufactured to break off or be cut to proper length for individual applications, door range 1 $\frac{3}{8}$ " - 3". (See locking mechanism instructions.)

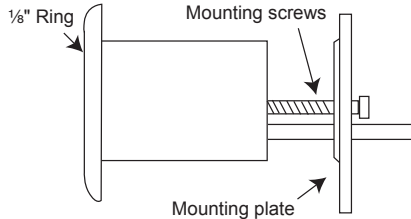

© Allegion 2014  
Printed in U.S.A.  
P509-965 Rev. 01/14-c