


# Small Format Interchangeable Core Rim Cylinder

 


#### P513-733

#### 1 To Remove Core


Insert control key and rotate 15° to the right until action stops. Pulling on the key will now extract core from housing.

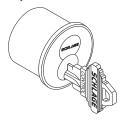




## 2 To Rotate Cam

Cylinder is shipped with driver bar in horizontal position.\* To change position, remove retainer ring. Reposition driver bar to vertical position. Reinstall retainer ring.

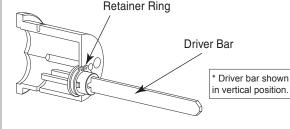

## 1 To Install Core

 With control key fully inserted, rotate key  $15^\circ$  to the right and insert core into cylinder housing. Rotate key back to the upright position and remove control key.




## **Customer Service**

1-877-671-7011

www.allegion.com/us

# 2 To Install Completed Unit

 Mounting screws are manufactured to break off or be cut to proper length for individual application, door range 1%" to 3". (See locking mechanism instructions)





© Allegion 2014 Printed in U.S.A. P513-733 Rev. 01/14-d