



740010

Header Adapter


LCN®

Installation Instructions

1

Remove, from end caps:

- (4) $\frac{5}{8}$ " Long Screws, two from each end.
- (2) $\frac{3}{8}$ " Long Screws, two from active (operator) end only on singles.
- (4) $\frac{3}{8}$ " Long Screws, two from each end on pairs.

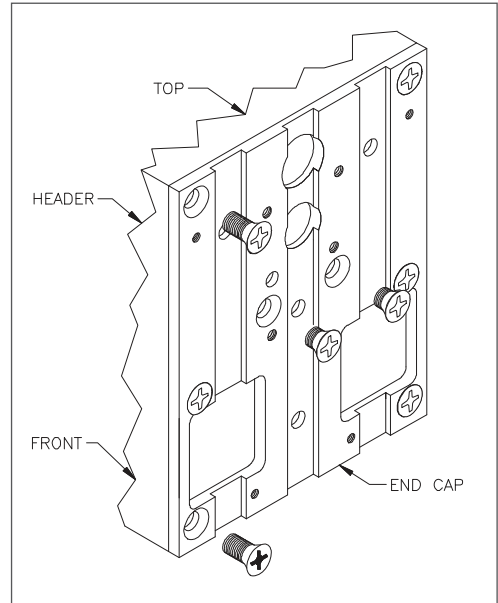

2

Attach mounting brackets to endcap by using:
on singles and pairs:

- (4) $\frac{3}{4}$ " Long Screws, two on each end.


And on pairs:

- (4) $\frac{5}{8}$ " Long Screws, two on each end.

Or on singles:

- (2) $\frac{5}{8}$ " Long Screws, used on active (operator) side.
- (2) 1" Long Screws, used on non-active side.
- (2) Washers, used on non-active side.
- (2) Locknuts, used on non-active side.


Locknuts & washers attach inside of endcap.

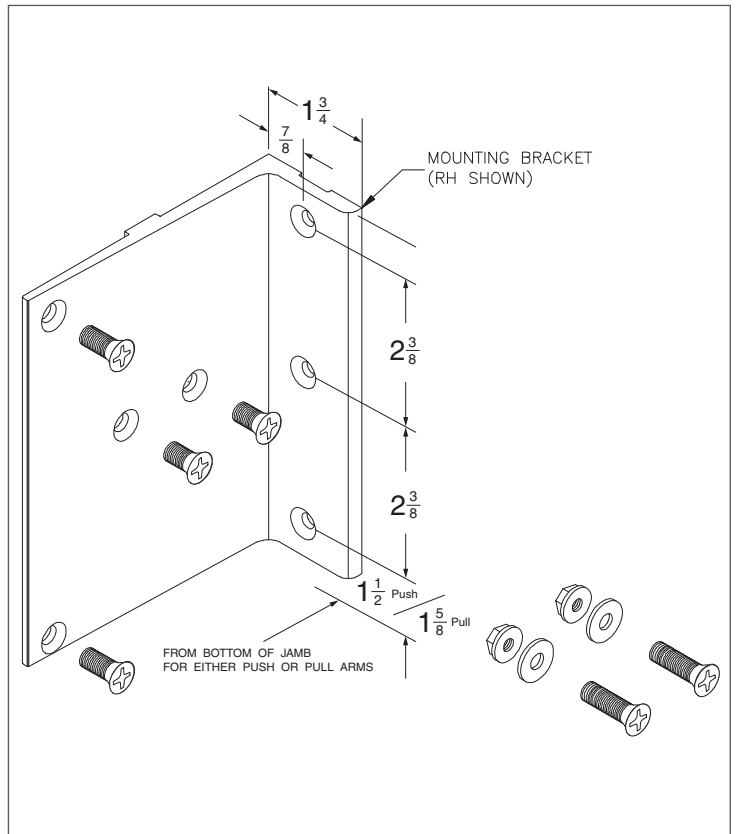


Prep jambs for riv-nut fasteners.


Attach riv-nuts to jambs (3 per side, 6 total).

Mount header using 1" long screws.

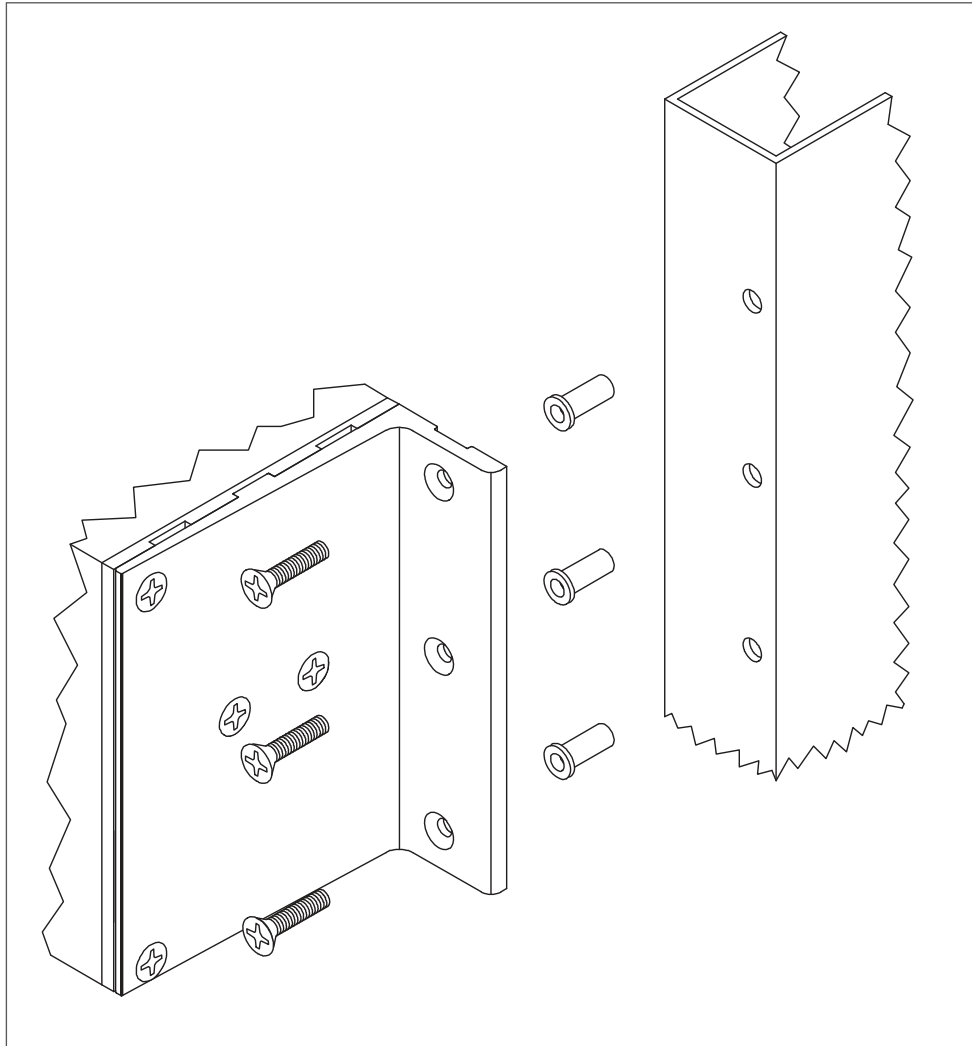

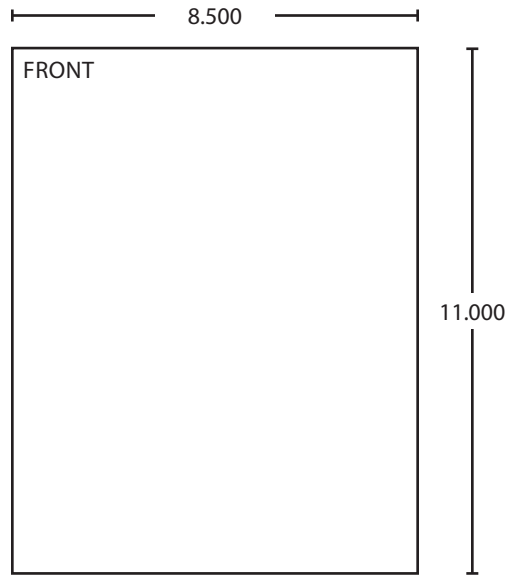

BEGINNING SHEET

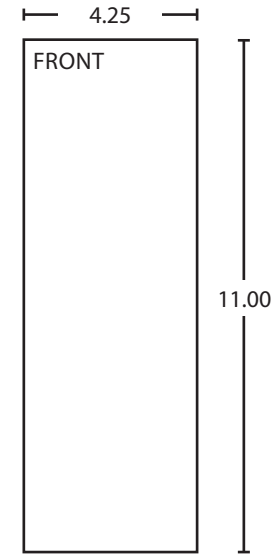

FOLDED SHEET

Additional Notes:
1. None

Revision History						Revision Description: C > Revised artwork					
A	B	C	D	E	F						
N/A	N/A	047232									
Material						Edited By		Approved By		EC Number	Release Date
White Paper						D. Myers		M. Sasso		047232	02-18-14
Notes						Title					
1. printed two sides						HEADER ADAPTER INSTALLATION INSTRUCTIONS					
2. printed black						Creation Date		Number		Revision	
3. tolerance ± .13						08-30-08		740010		C	
4. printed in country may vary						Created By		Activity		© Allegion 2014	
5. drawings not to scale						N/A		3899 Hancock Expwy Security, CO 80911			
						Software: InDesign CS6					