


ELBOW CABINET CATCH

FOR USE ON KITCHEN, STORAGE AND UTILITY CABINET DOORS. PROVIDES TIGHT, CONCEALED FASTENING OF DOOR.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Phillips screwdriver, awl or pencil.


- Position catch (A) on inside of door approximately 1/2" from edge. Mark and secure loosely.
- Position strike (B) to line up with catch. Mark and secure loosely.
- 3. Check alignment of catch and strike before securing tightly.

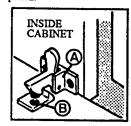

MAINTENANCE INSTRUCTIONS

IVES Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY IVES



MADE IN U.S.A. © H.B. IVES, NEW HAVEN, CT 06508