


300's

no longer carried

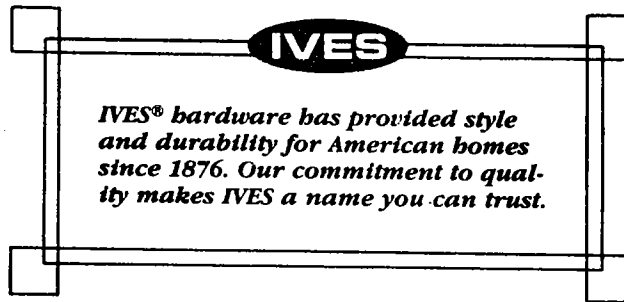


**MAGNETIC CATCH**

FOR USE ON CABINETS AND LIGHTWEIGHT INTERIOR DOORS. MAY BE INSTALLED ON TOP, SIDE OR BOTTOM OF CABINET.


**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Drill, 1/16" drill bit, Phillips screwdriver, awl or pencil.

1. Position case (A) on cabinet, as shown or at point where door inset fits into cabinet. Mark, drill pilot holes at center point of elongated holes and secure.
2. Position strike (B) on inside door to align with case (A). Mark, drill pilot hole and secure.
3. To assure snug closing, make adjustment by moving case (A) either outward or inward and secure.

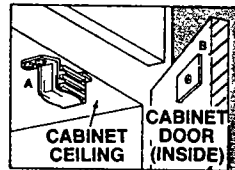

ASK FOR OTHER FINE HARDWARE BY H.B. IVES

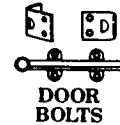

MAGNETIC CATCH C323A69 BRONZE

MADE IN U.S.A.