


**BALL CATCH**

FOR USE ON CABINET, WARDROBE AND INTERIOR DOORS. PROVIDES AUTOMATIC, POSITIVE LATCHING AND FEATURES TENSION ADJUSTMENT.

**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Drill, 3/32" and 9/16" drill bits, chisel, hammer, Phillips screw-driver and pencil.

1. Position in center of door edge in desired location. Mark and drill 9/16" dia. hole 1" deep (A).
2. Position catch in hole — mark screw holes and shape of plate. Remove catch. Drill 3/32" pilot holes for screws and chisel out plate area 1/16" deep. Secure.
3. Locate strike as shown in (B) to align with ball catch (curved edge facing out). Mark screw holes and shape of strike.
4. Mortise out area 3/8" x 1/2" x 3/16" deep to accommodate inverted catch section of strike (C). Chisel shape of strike to 1/16" deep. Secure.
5. Adjust ball clearance by turning threaded area (D).

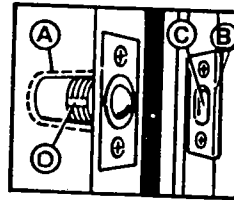

**MAINTENANCE INSTRUCTIONS**

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

**ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES**



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



BALL CATCH C345 B3 BRT  
MADE IN U.S.A.