


CHAIN DOOR GUARD

FOR USE ON INTERIOR OR EXTERIOR DOORS FOR ADDED SECURITY. FEATURES WELDED STEEL CHAIN.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, $\frac{1}{16}$ " drill bit, Phillips screwdriver, awl or pencil.

1. Position plate (A) approximately 52" from bottom of door. Mark, drill pilot holes, and secure.
2. Position chain holder (B) at same height as plate. Before securing chain holder, make sure distance between chain holder and plate is no more than $\frac{1}{2}$ ". Mark, drill pilot holes and secure.

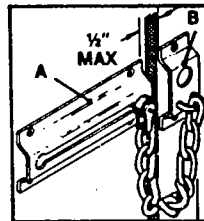

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



CHAIN DOOR GUARD C481F3 BRASS

MADE IN USA