

KNOB BACKPLATE CC


FOR USE WITH IVES ROUND KNOBS (5/8", 3/4", 1"), COLONIAL KNOBS (5/8", 1"), OR OVAL KNOB (1-1/8").

PREVENTS SCUFFING OF DRAWER AND DOOR SURFACES.
COVERS SURFACE BLEMISHES.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Regular screwdriver.

1. Position backplate (A) and secure as shown in illustration.

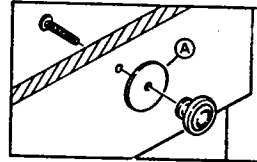

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



CC BACKPLTE 1 1/2" C513 B3 BRT

MADE IN U.S.A.