


LINE CLEAT

FOR USE IN THE HOME AND ON BOATS, TO SECURE WINDOW SHADES, ROPE, CORDS, OR LINES.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, $\frac{3}{32}$ " drill bit, Phillips screwdriver, awl or pencil.

1. Place in desired position and mark.
2. Drill pilot holes and secure with screws provided.

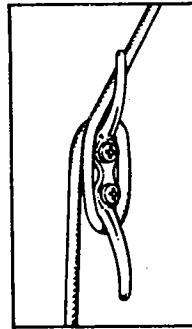

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



LINE CLEAT 2 1/2" C587B3 BRT

MADE IN U.S.A.