


SIDE WINDOW LOCK
 FOR USE ON DOUBLE HUNG OR WOOD CASEMENT WINDOWS TO HOLD WINDOW OPEN AT DESIRED POSITION. IDEAL FOR WINDOWS IN WHICH AIR CONDITIONER IS INSTALLED.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED:
 Drill, 3/32" drill bit,
 Phillips screwdriver, awl
 or pencil.

1. Place window lock flat on window frame (A) in retracted position 1/16" away from window rail (B) and approximately 6" from window sill.
2. Mark, drill pilot holes and secure.

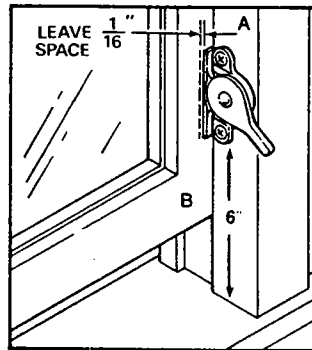

NOTE: Two side window locks are recommended per window.

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



SIDE WINDOW LOCK C90R3 BRASS

MADE IN USA