



TEMPLATE FOR WMG600

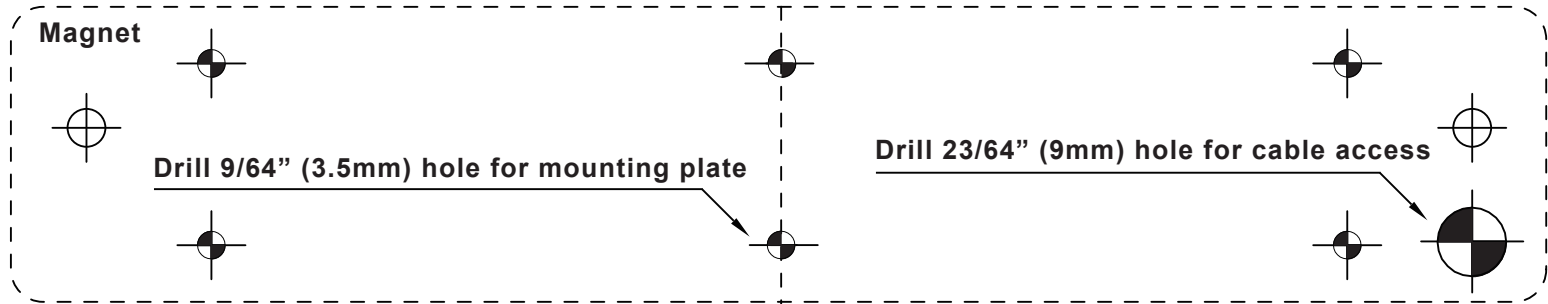

PLACE AGAINST THE DOOR HEADER

FOLD THIS DOTTED LINE

FOLD THIS DOTTED LINE

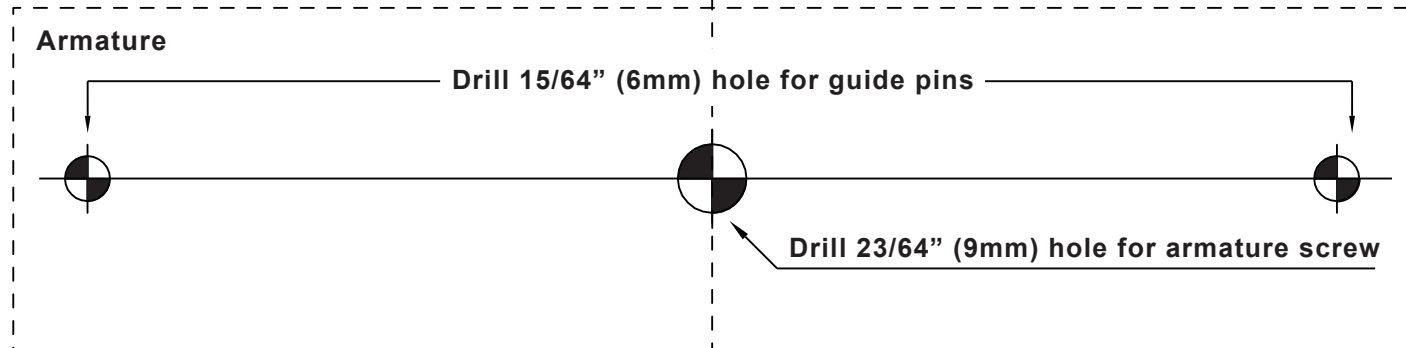

PLACE AGAINST THE DOOR EDGE