


# VON DUPRIN®

## INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
  - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
  - B. Locate and prepare all holes as shown.
3. Apply trim.
4. Apply exit device.

Exit Device	Strike	Mullion	Min. Backset	"A"	Min. Stile
33A/35A Rim	299	—	—	15/16"	3-1/2"
33A/35A Rim	1409	—	—	1/8"	3-1/2"
33A/35A Rim	1410	—	—	1/8"	3-1/2"
33A/35A Rim	1408	5754	—	1/8"	3-1/2"
33A/35A Rim	299	4954	—	15/16"	3-7/8"
33A/35A Rim	299	5654	—	15/16"	3-1/2"
33A/35A Rim	1606	1654	—	1/2"	3-7/8"
3327A/3527A 3327A-F/3527A-F 3347A/3547A 3348A/3548A	—	—	1-7/8"	11/16"	3-3/4"
3347A-F/3547A-F 3348A-F/3548A-F	—	—	2-3/4"	11/16"	4-3/8"

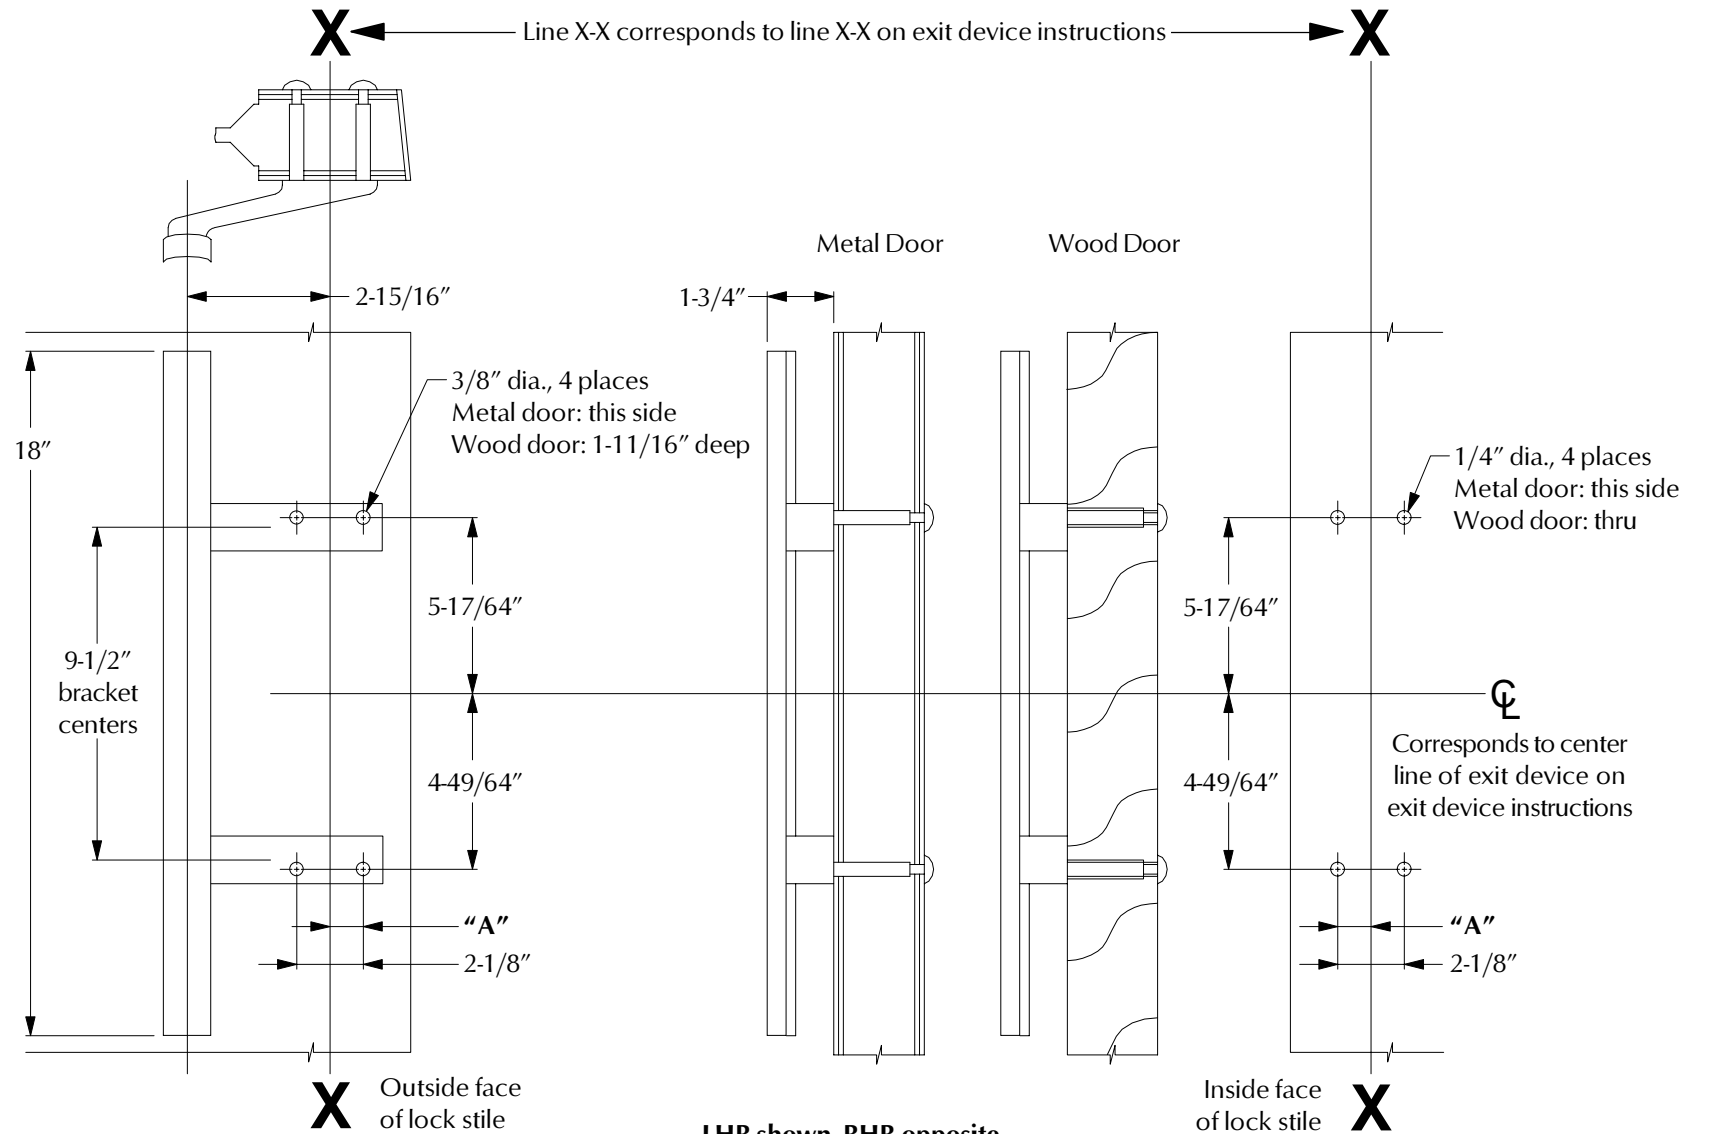

For cutouts on inside face of door, see exit device instructions

**NOTES**

1. For stiles wider than min. listed, dimension "A" may be adjusted accordingly.
2. Thru bolts must not interfere with vertical rods on concealed vertical rod devices.

**IR Security & Safety**  
Proven Source. Proven Solutions.™

**01 MOD TRIM**  
FOR 33A/35A DEVICES

Copyright © 2004 Ingersoll-Rand.  
All rights reserved.

PAGE NO.  
**1 of 1**

REVISION  
**1**



**921441-00**