


# VON DUPRIN®

## INSTALLATION INSTRUCTIONS

1. Prepare door for 330/350 Push Bar. See 330/350 Push Bar instructions for locations of holes and center lines.
2. Prepare door for trim:
  - A. Transfer vertical center line from inside (330/350 Push Bar) side of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure vertical center line is parallel to edge of door.
  - B. Locate and prepare holes as shown.
3. Apply 330/350 Push Bar.
4. Apply trim.

Trim	Dimension "A"	Dimension "B"
3308	10"	8-15/16"
3311	13"	11-15/16"
3314	16"	14-15/16"
3318	20"	18-15/16"

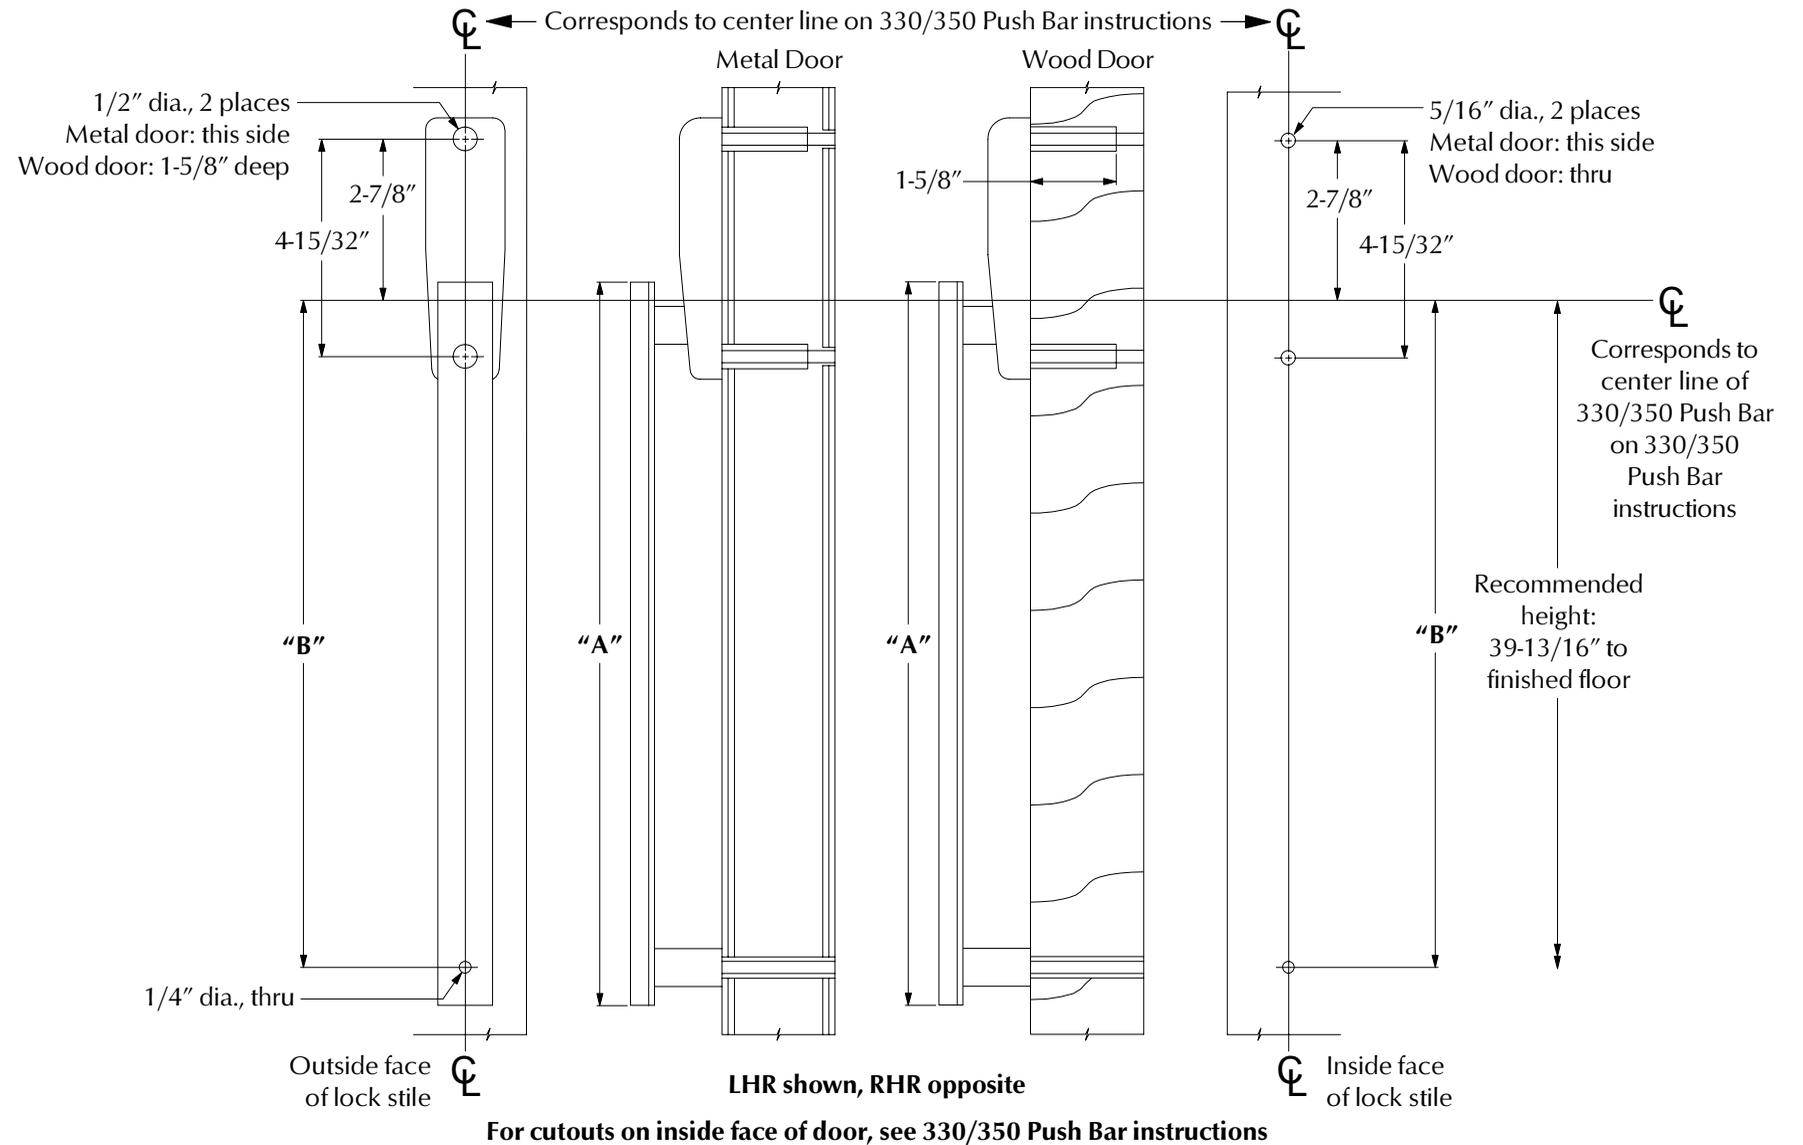

**IR** Security & Safety  
Proven Source. Proven Solutions.™

**3308, 3311, 3314, AND 3318DT TRIM  
FOR 330/350 PUSH BAR**

Copyright © 2004 Ingersoll-Rand.  
All rights reserved.

PAGE NO.  
**1 of 1**

REVISION  
**2**



**921324-00**