


VON DUPRIN®

INSTALLATION INSTRUCTIONS

1. Prepare door for 330/350 Push Bar. See 330/350 Push Bar instructions for locations of holes and center lines.
2. Prepare door for control:
 - A. Transfer vertical center line from inside (330/350 Push Bar) side of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure vertical center line is parallel to edge of door.
 - B. Locate and prepare holes as shown.
3. Apply control.
4. Apply 330/350 Push Bar.

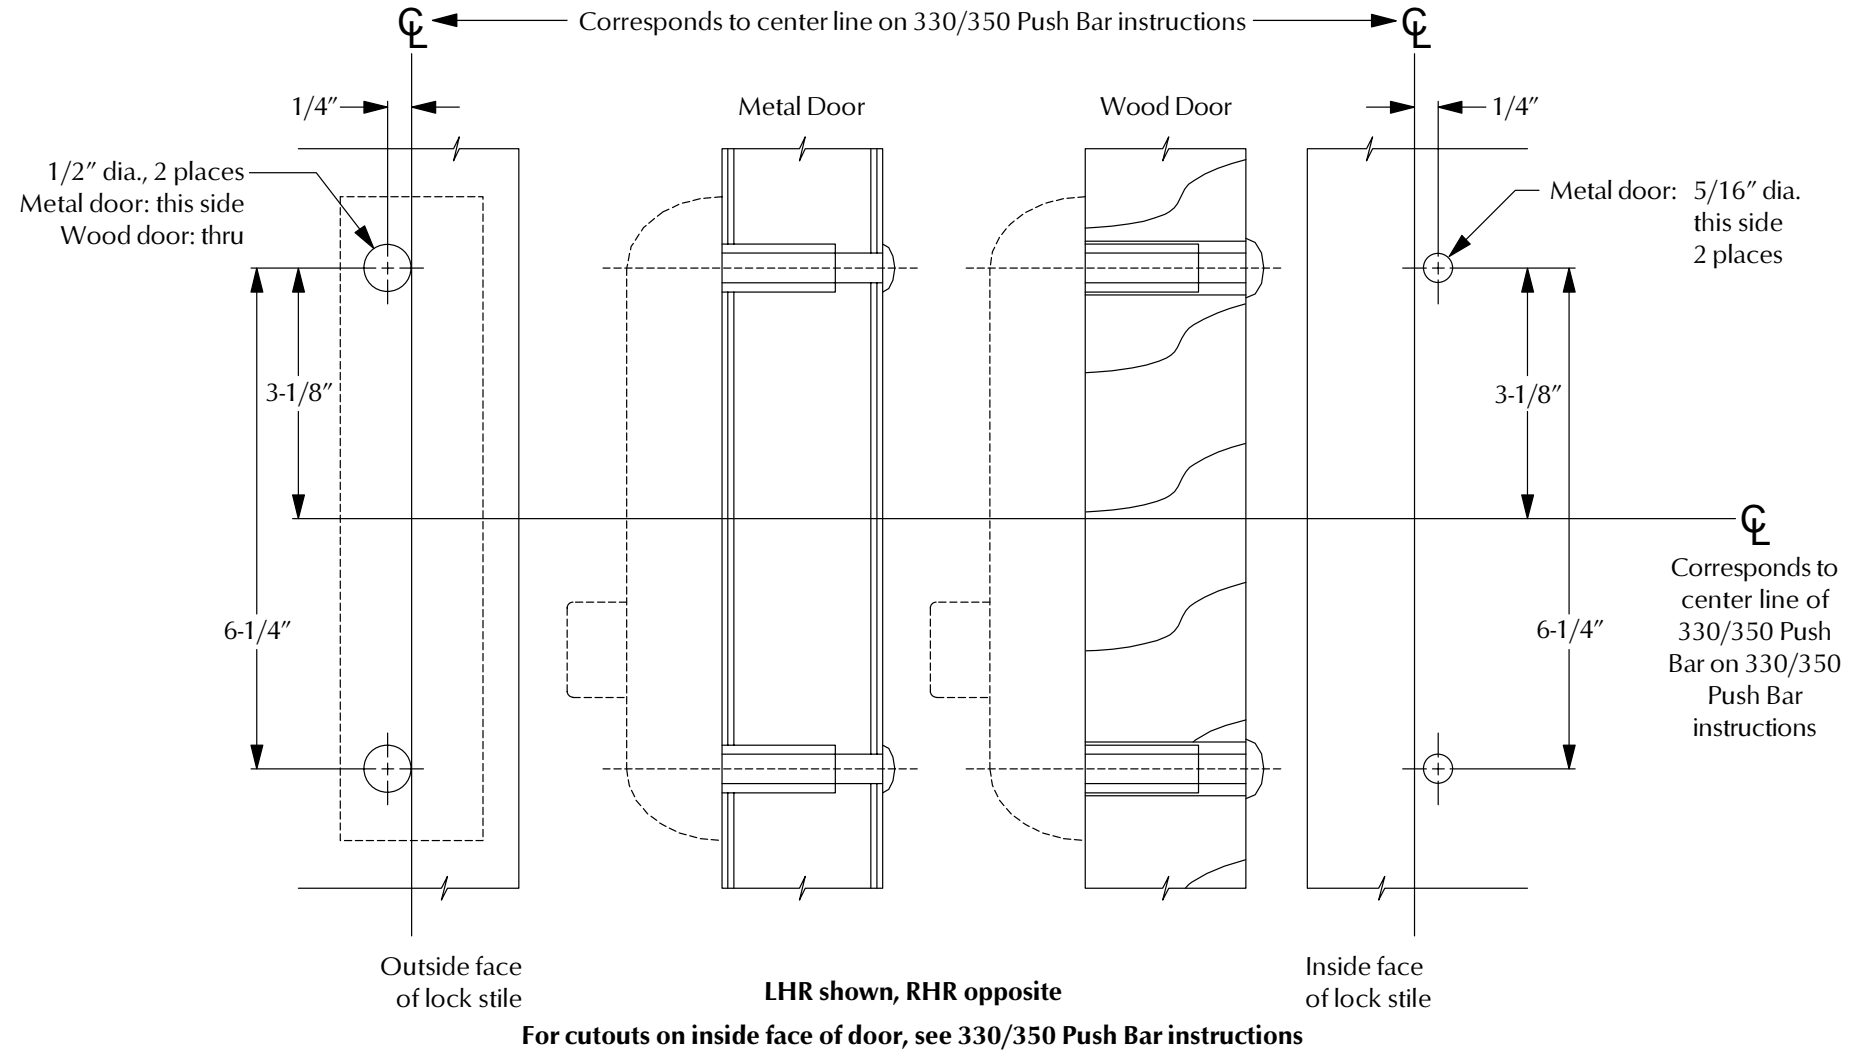

370L-DT CONTROL FOR 330/350 PUSH BAR

Copyright © 2004 Ingersoll-Rand.
All rights reserved.

PAGE NO.
1 of 1

REVISION
1



941150-00