
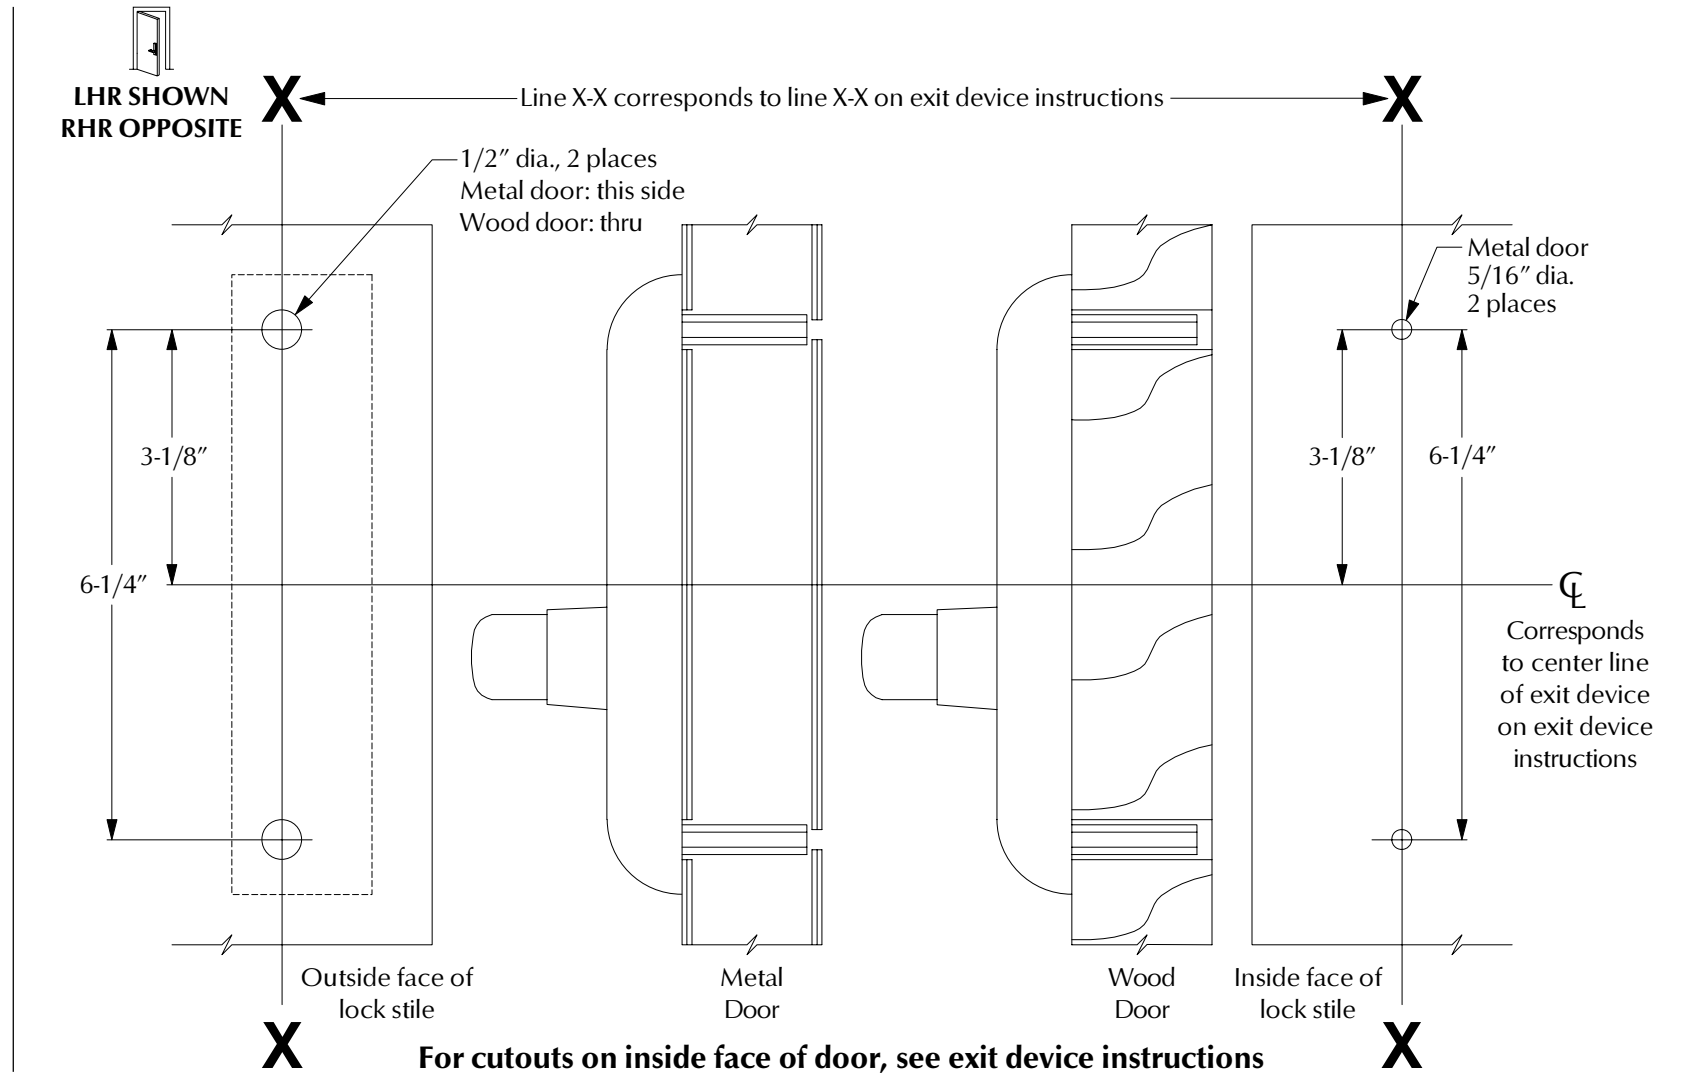


# VON DUPRIN®

## INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for holes, backset (line X-X), and center lines.
2. Prepare door for control.
  - A. Transfer line X-X from inside (exit device side) of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
  - B. Locate and prepare all holes as shown.
3. If necessary, move 1/4-20 x 1" socket set screws and mounting studs to suit handing of door (Figure 1).
4. Apply control.
5. Apply device.

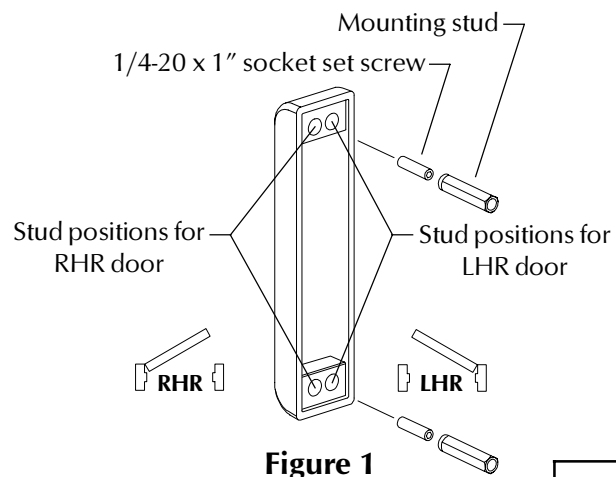

**IR** Security & Safety  
Proven Source. Proven Solutions.™

**370L-DT CONTROL**  
FOR 33/3527 DEVICE, METAL OR WOOD DOOR

Copyright © 2004 Ingersoll-Rand.  
All rights reserved.

PAGE NO.  
**1 of 1**

REVISION  
**3**



941135-00