



921025-00

Surface Applied Trim

550DT

VON DUPRIN®


Installation Instructions

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
 - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
 - B. Locate and prepare all holes as shown.
3. Apply trim.
4. Apply exit device.

Device Application Schedule

44 SA (surface applied)
55 SA (surface applied)
88 SA (surface applied)

Metal door: #12-24 tap, this side 4 places
Wood door: pilot holes for #12 wood screws 4 places

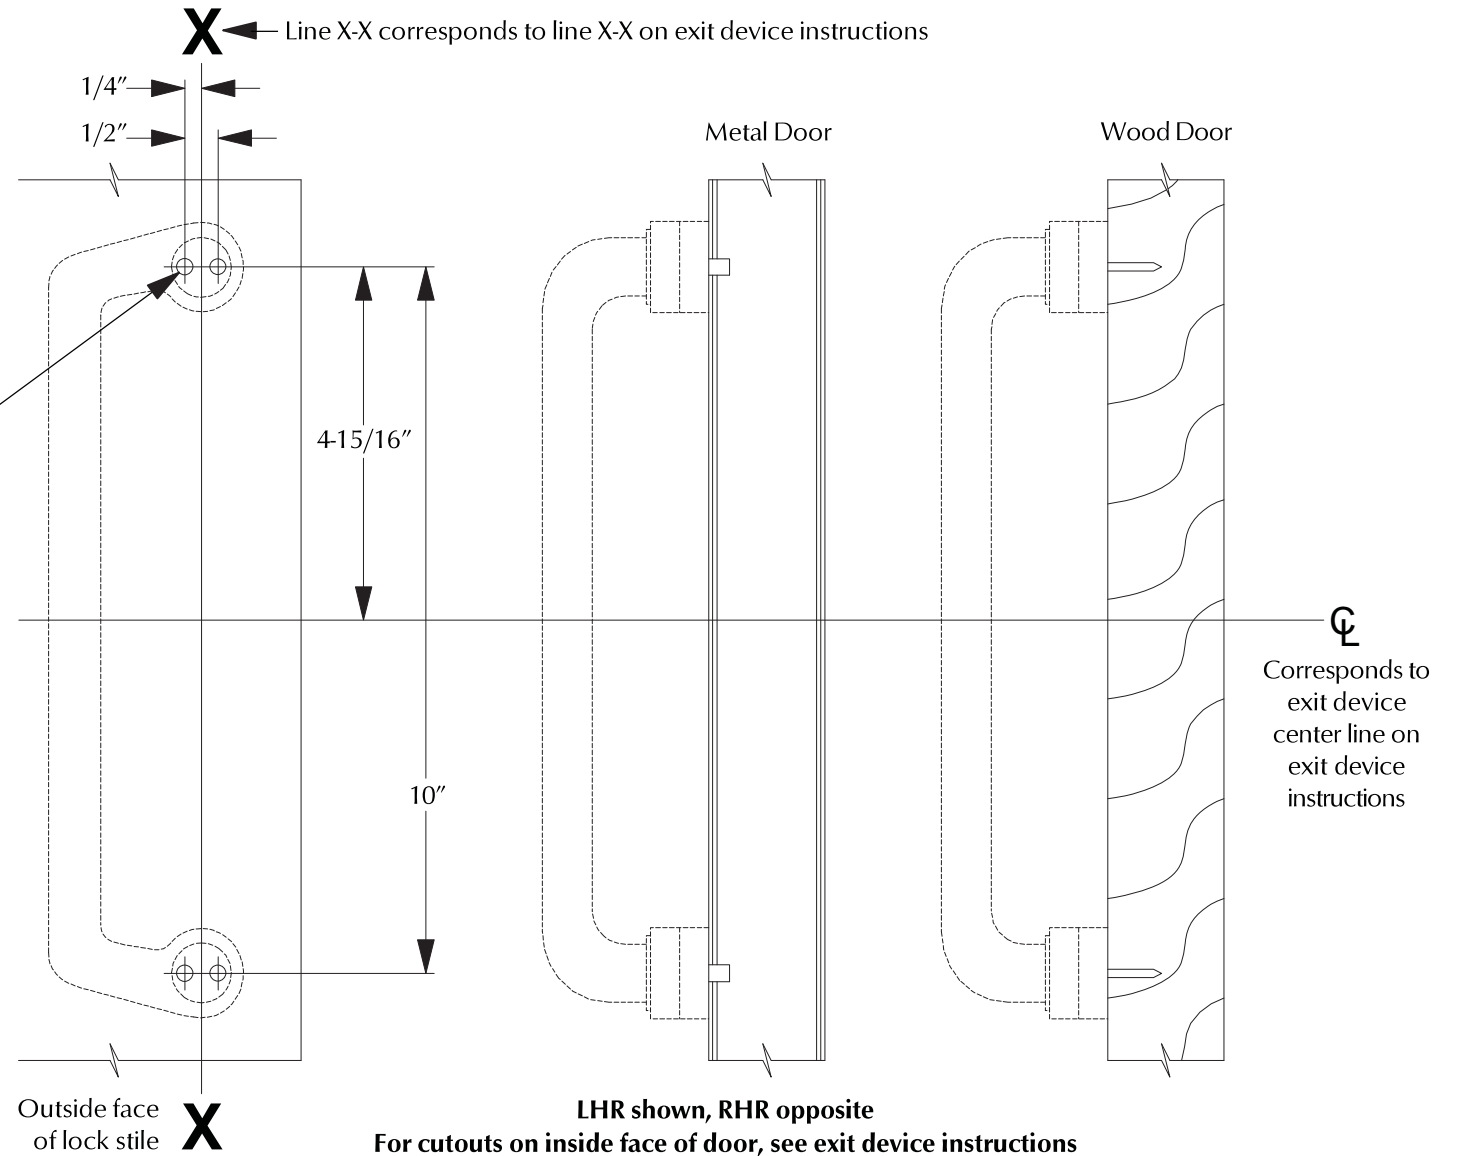

Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
921025-00 Rev. 10/14-b