



954677-00

88 Retrofit Plates for XX


VON DUPRIN®

Installation Instruction

- ⓘ These device kits provide plates for retrofitting an 88 device on a door previously prepped for an XX device.
 - a. Mark device centerline and backset on door with pencil.
 - b. Notches on plates align to centerlines; use tape to hold plates in position.
 - c. Prep door.

Cover Plate Package - Rim Devices

- ⓘ The Rim device package contains the plates shown below. Device sold separately.

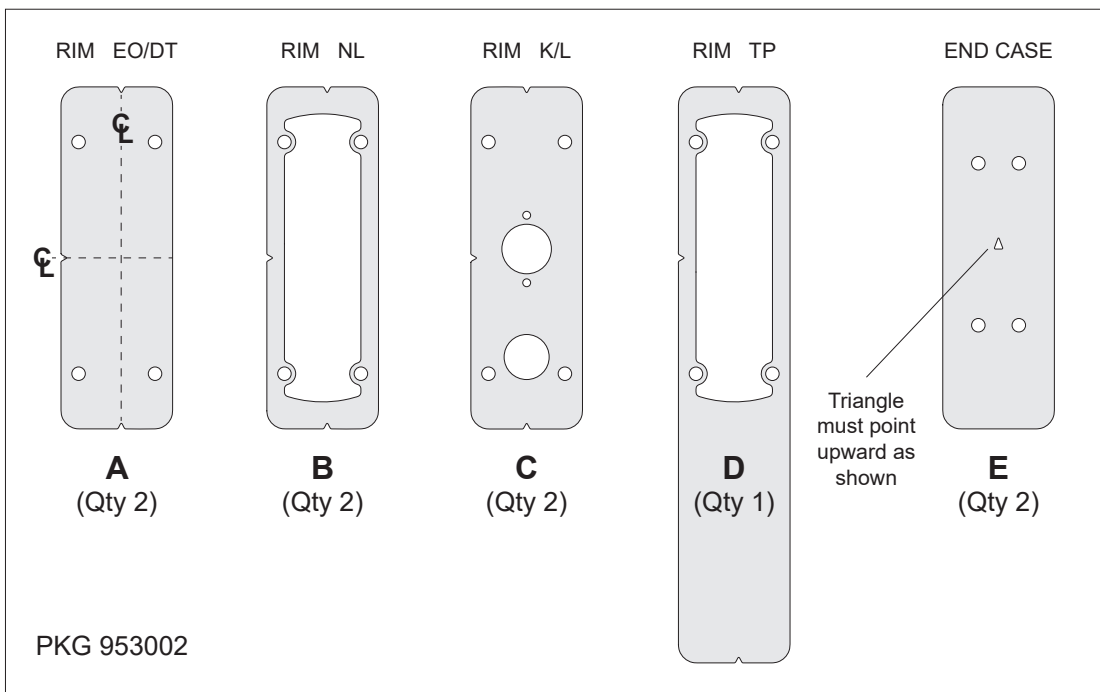


	FUNCTION	DOOR SIDE	SURFACE MOUNT		SEX BOLT	
			LOCK	HINGE	LOCK	HINGE
RIM DEVICES <u>HOLE PREP</u> SURFACE MOUNT = #10 SEX BOLT = .50" TRIM = .50"	EO	INSIDE	A	E	A	E
		OUTSIDE	x	x	A	E
	DT	INSIDE	A	E	A	E
		OUTSIDE	A	x	A	E
	NL	INSIDE	B	E	B	E
		OUTSIDE	B	x	B	E
	K	INSIDE	C	E	C	E
		OUTSIDE	C	x	C	E
	L	INSIDE	C	E	C	E
		OUTSIDE	C	x	C	E
	TP	INSIDE	B	E	B	E
		OUTSIDE	D	x	D	E

ⓘ x = no plate needed

Cover Plate Package - Mortise and Surface Vertical Rod Devices

i The Mortise/SVR device package contains the plates shown below. Device sold separately.

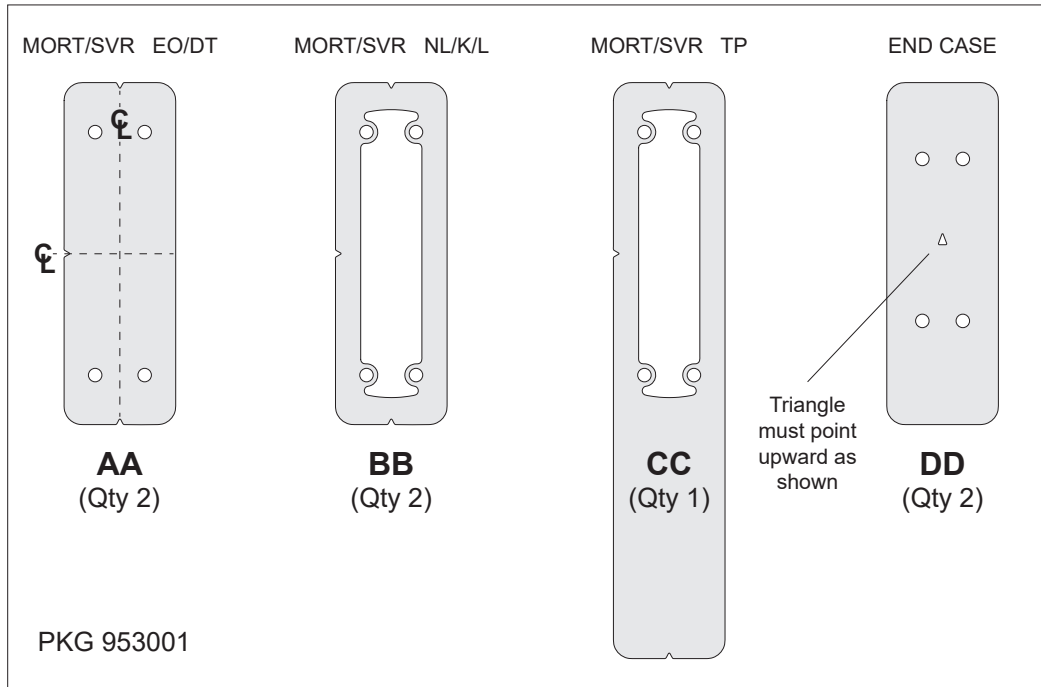

i For Mortise retrofit installations, the centerline has been shifted slightly lower to 39-15/16" from finished floor to match the mortise centerline of the XX series.

FUNCTION	DOOR SIDE	SURFACE MOUNT		SEX BOLT	
		LOCK	HINGE	LOCK	HINGE
EO	INSIDE	AA	DD	AA	DD
	OUTSIDE	x	x	AA	DD
DT	INSIDE	AA	DD	AA	DD
	OUTSIDE	AA	x	AA	DD
NL	INSIDE	BB	DD	BB	DD
	OUTSIDE	BB	x	BB	DD
K	INSIDE	BB	DD	BB	DD
	OUTSIDE	BB	x	BB	DD
L	INSIDE	BB	DD	BB	DD
	OUTSIDE	BB	x	BB	DD
TP	INSIDE	BB	DD	BB	DD
	OUTSIDE	CC	x	CC	DD

MORTISE/SVR DEVICES

HOLE PREP

SURFACE MOUNT = #10
SEX BOLT = .50"
TRIM = .50"

i x = no plate needed

Customer Service

1-877-671-7011 www.allegion.com/us

