




941280-00

Mounting Screws

Installation Instructions


This screw pack is used when mounting to a SLM door. Find the chart for the exit device being installed and use screws as shown in the drawing.

98/99-F Rim

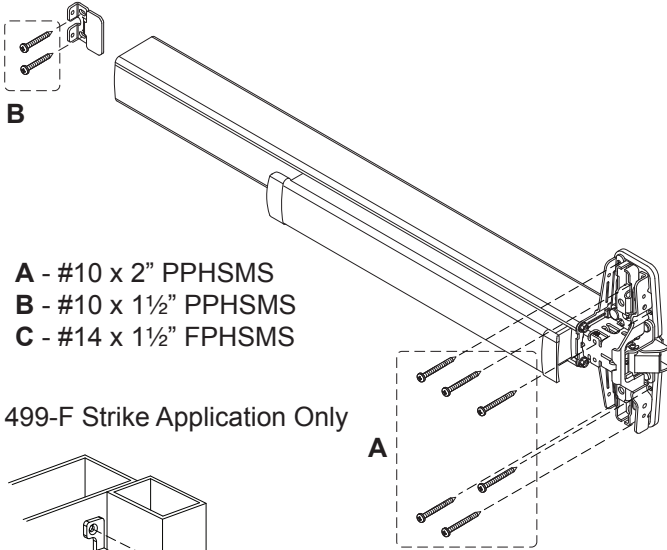


- A** - #10 x 2" PPHSMS
- B** - #10 x 1½" PPHSMS
- C** - #14 x 1½" FPHSMS

98/9947-F

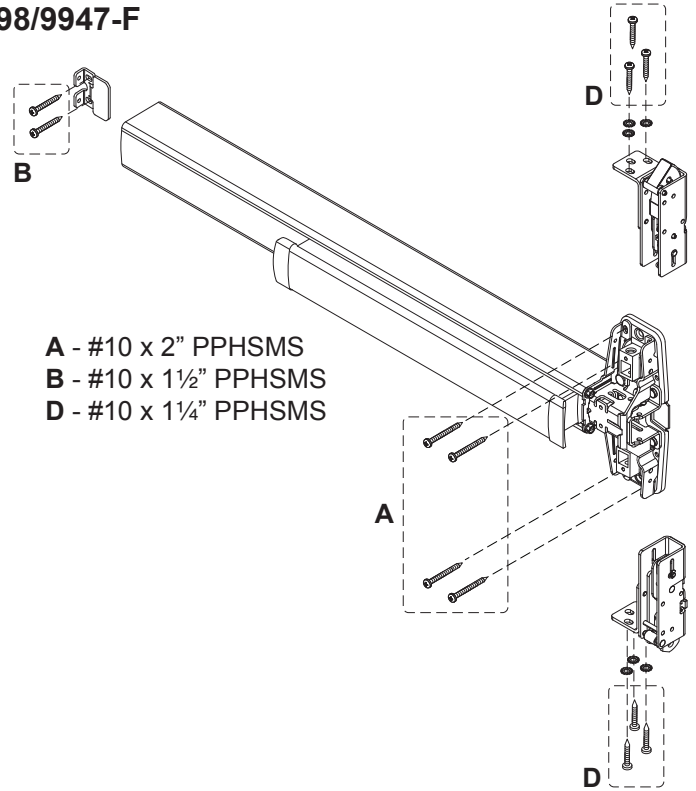


- A** - #10 x 2" PPHSMS
- B** - #10 x 1½" PPHSMS
- D** - #10 x 1¼" PPHSMS

98/9927-F

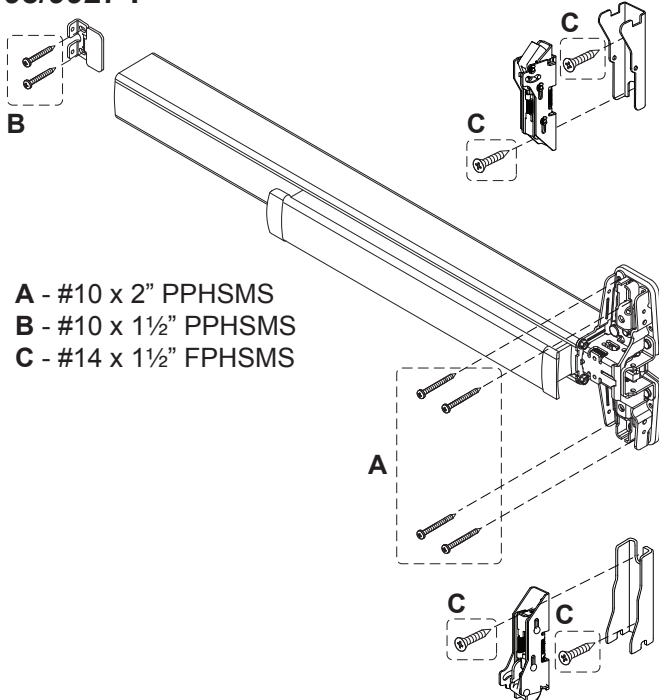

- A** - #10 x 2" PPHSMS
- B** - #10 x 1½" PPHSMS
- C** - #14 x 1½" FPHSMS

98/9975-F

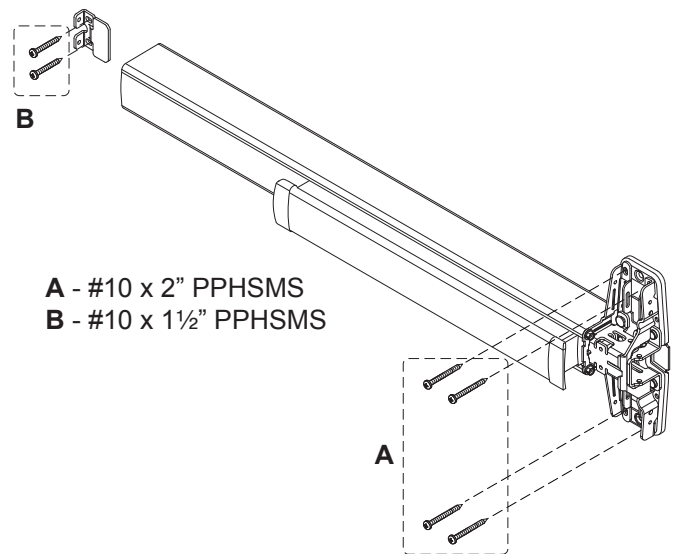

- A** - #10 x 2" PPHSMS
- B** - #10 x 1½" PPHSMS

Customer Service

1-877-671-7011 www.allegion.com/us

