




47255374

Model 11 Rain Drip




Installation Instructions

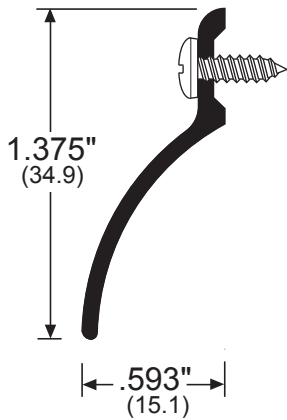

- 1 Cut the rain drip length to fit. (see below)
- 2 Mark hole locations for screws. Drill holes for screws if necessary.
- 3 Fasten screws.
- 4 Caulk the top edge of rain drip to prevent water penetration.


TYPICAL INSTALLATION:

- Installation on exterior face of frame header.

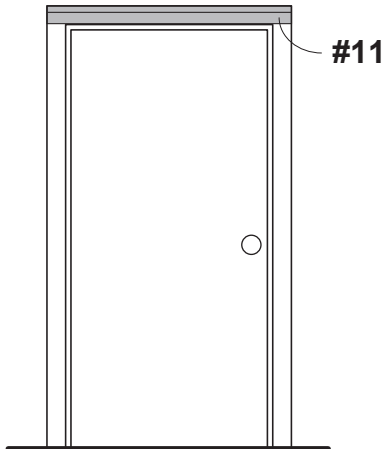


Length of rain drip should be the full width of the door frame.

- Installation on exterior face of door.

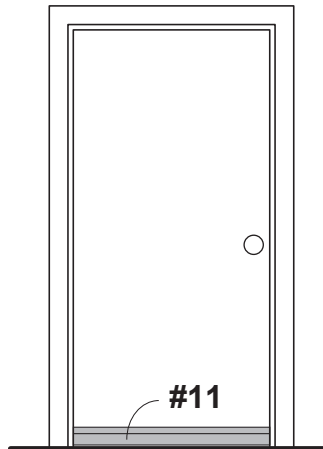

Inswing Door :
Length of rain drip should be fit within the door jamb.

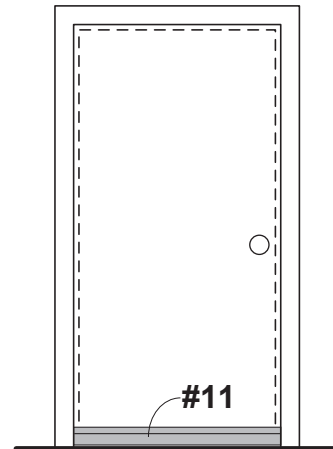

Outswing Door :
Length of rain drip should be the width of the door.



Customer Service

1-877-671-7011

www.allegion.com/us

© Allegion 2016
Printed in U.S.A.
47255374 Rev. 11/16-b