





23792518

717DT / 718DT 718C / 718NL

FALCON®

Concealed Vertical Trim
Vertical oculto Moldura
Dissimuler la tige et le Garniture


Installation Instructions
Instrucciones de instalación
Notice d'installation

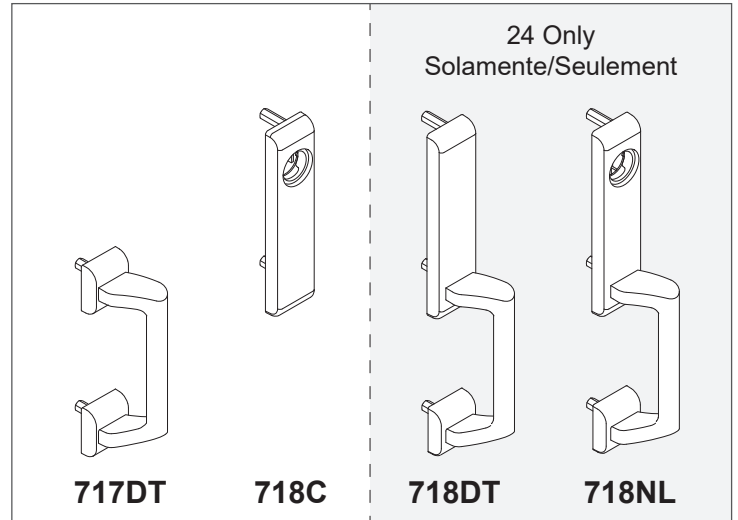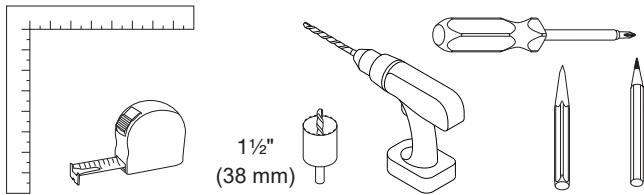


1 Transfer \varnothing from device side to trim side of door

Transfiera \varnothing desde el lado del mecanismo al lado de la moldura de la puerta

Transfert \varnothing du côté du dispositif vers la garniture latérale de porte

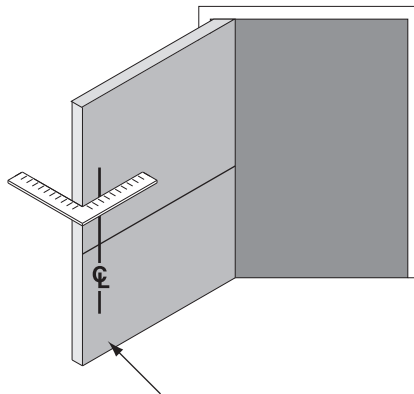

Exit Device Side of Door
Lado de Dispositivo de Salida
Côté de Appareil de Sortie

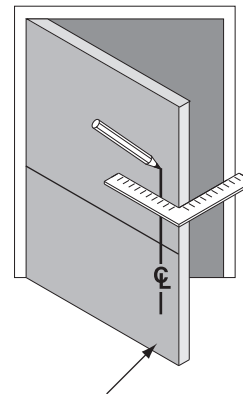

Trim Side of Door
Lado de Guarnición
Côté de la Chant



Customer Service Servicio al cliente Service à la clientèle

1-877-671-7011

www.allegion.com/us



© Allegion 2020
Printed in U.S.A.
23792518 Rev. 01/20-d

2 Prepare door



Prepare la Puerta

Préparer la Porte

24 Device / Dispositivo / Appareil

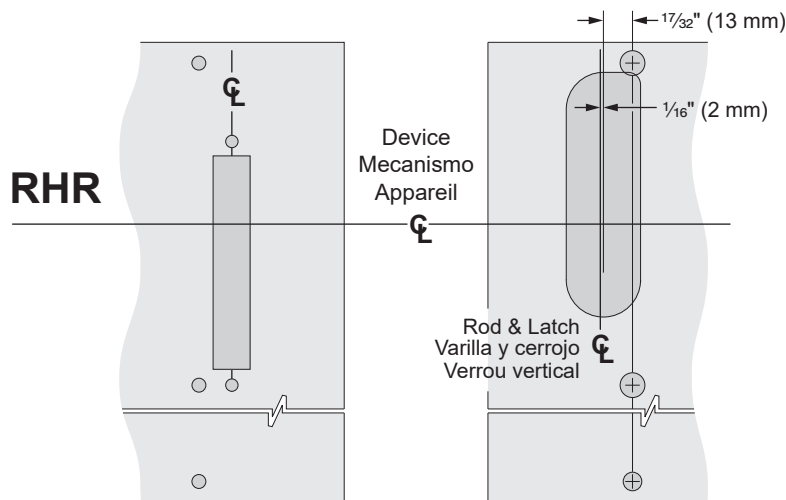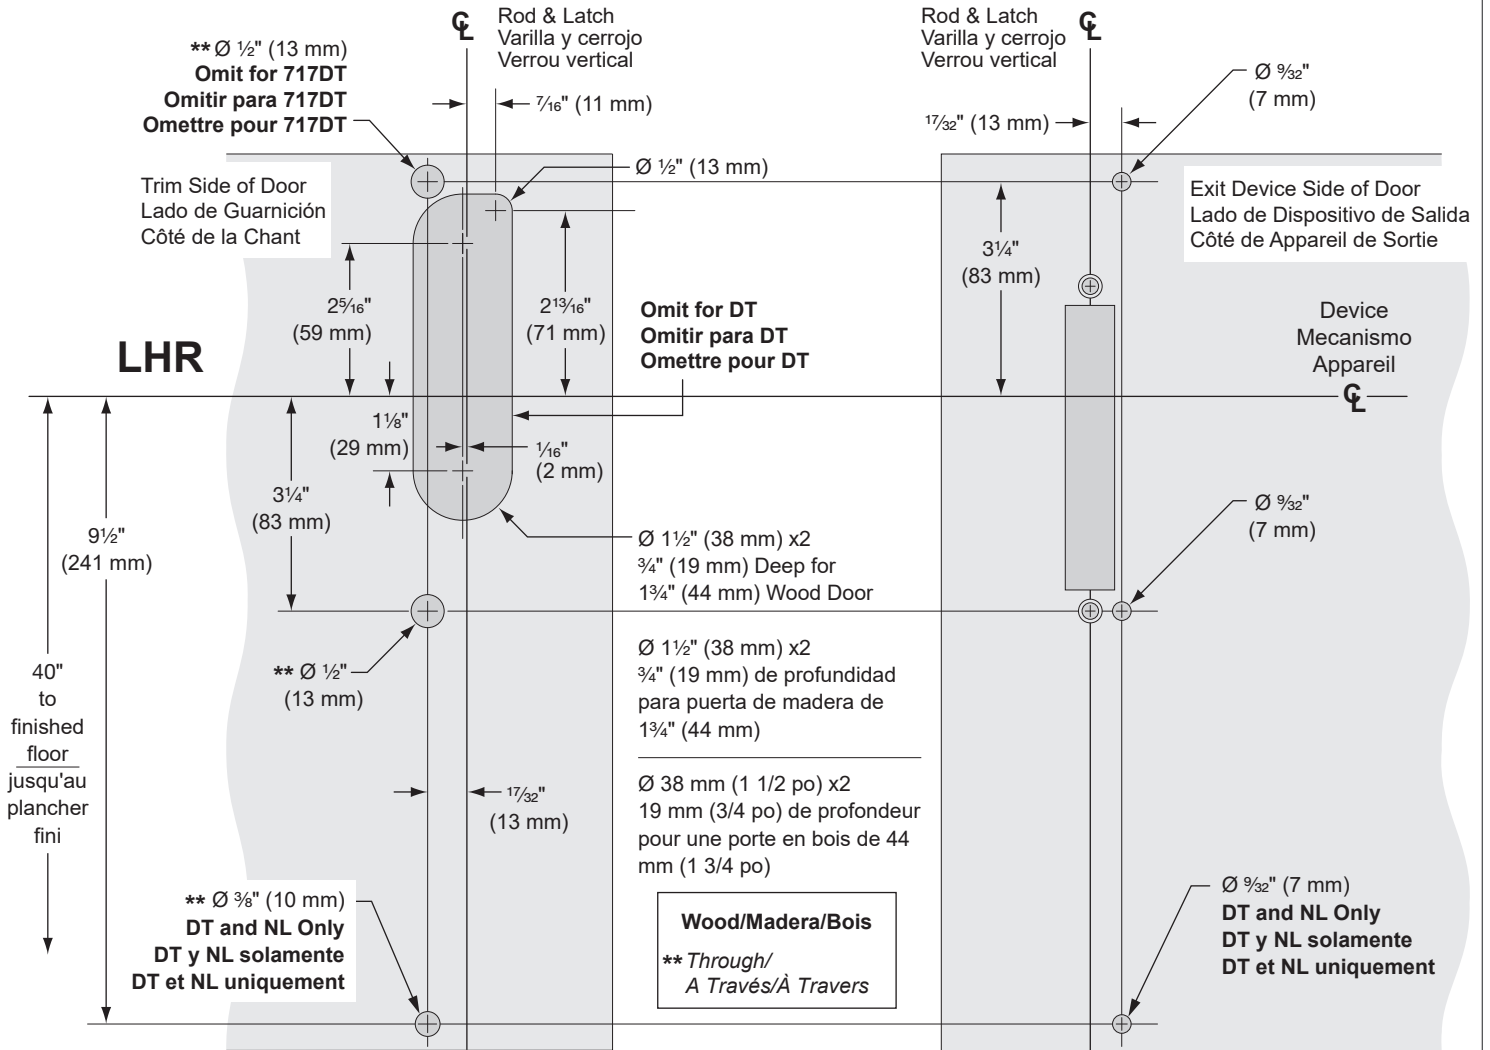


25 Device / Dispositivo / Appareil

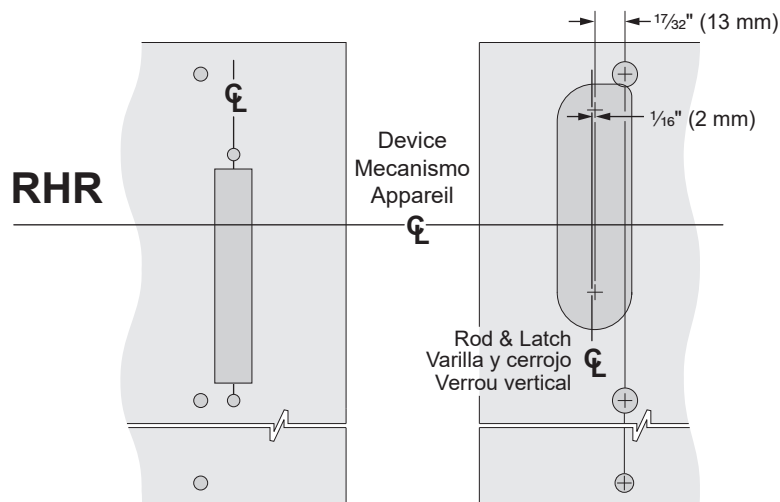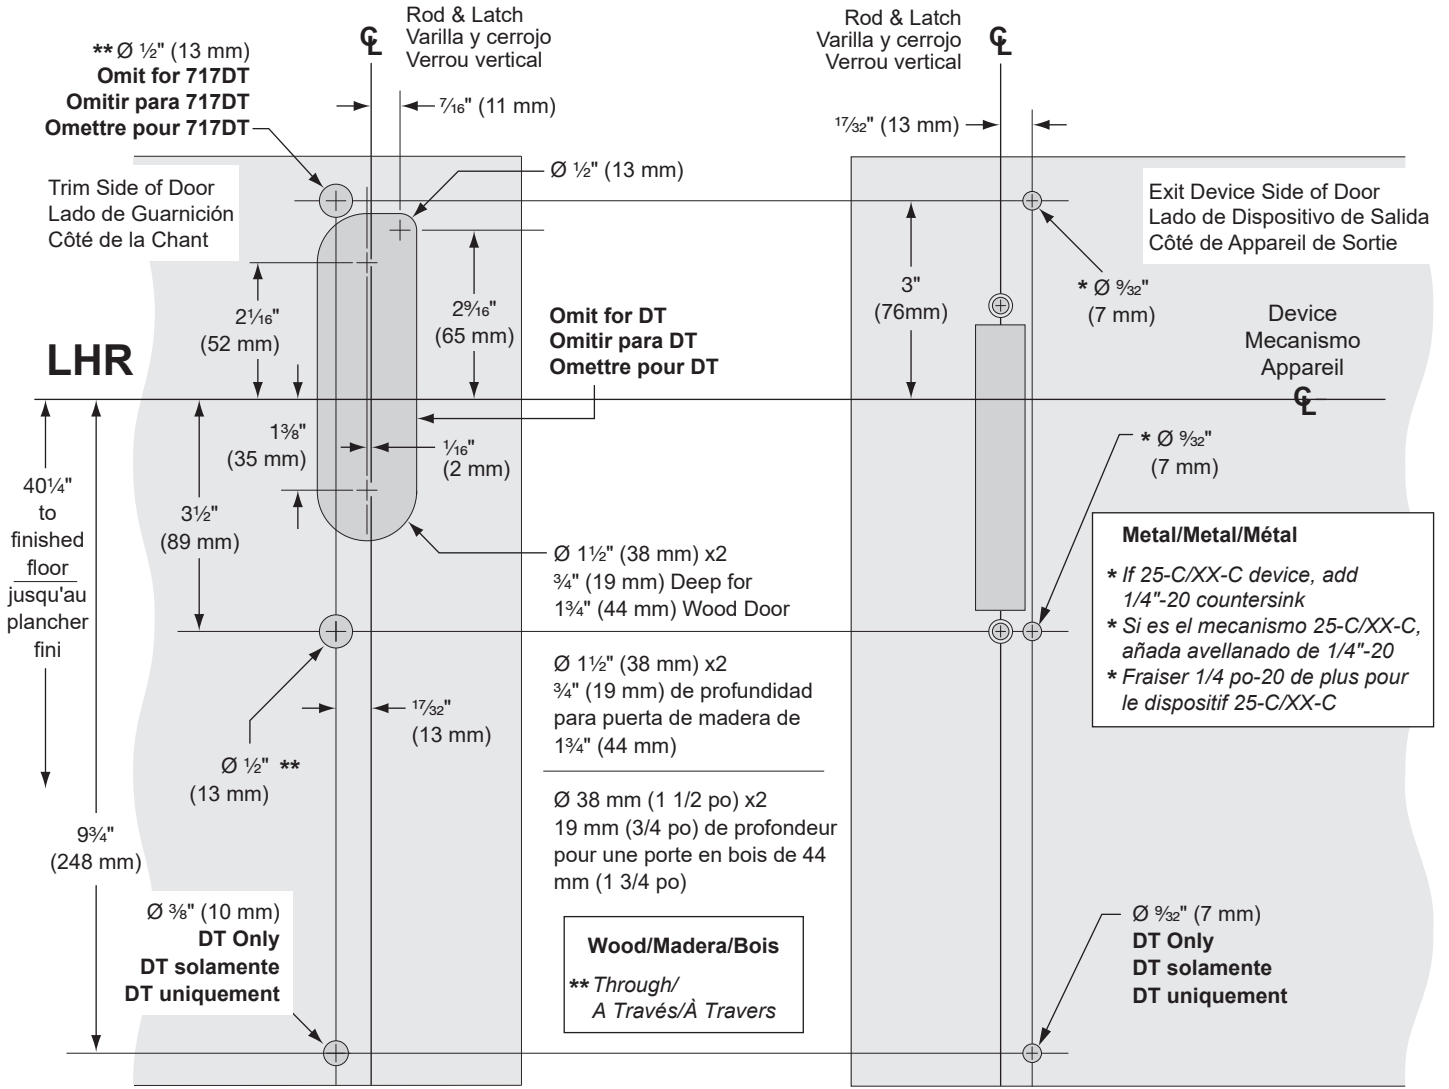

3 If necessary, rehand trim

De ser necesario, ajuste la moldura

Réutiliser la garniture si nécessaire

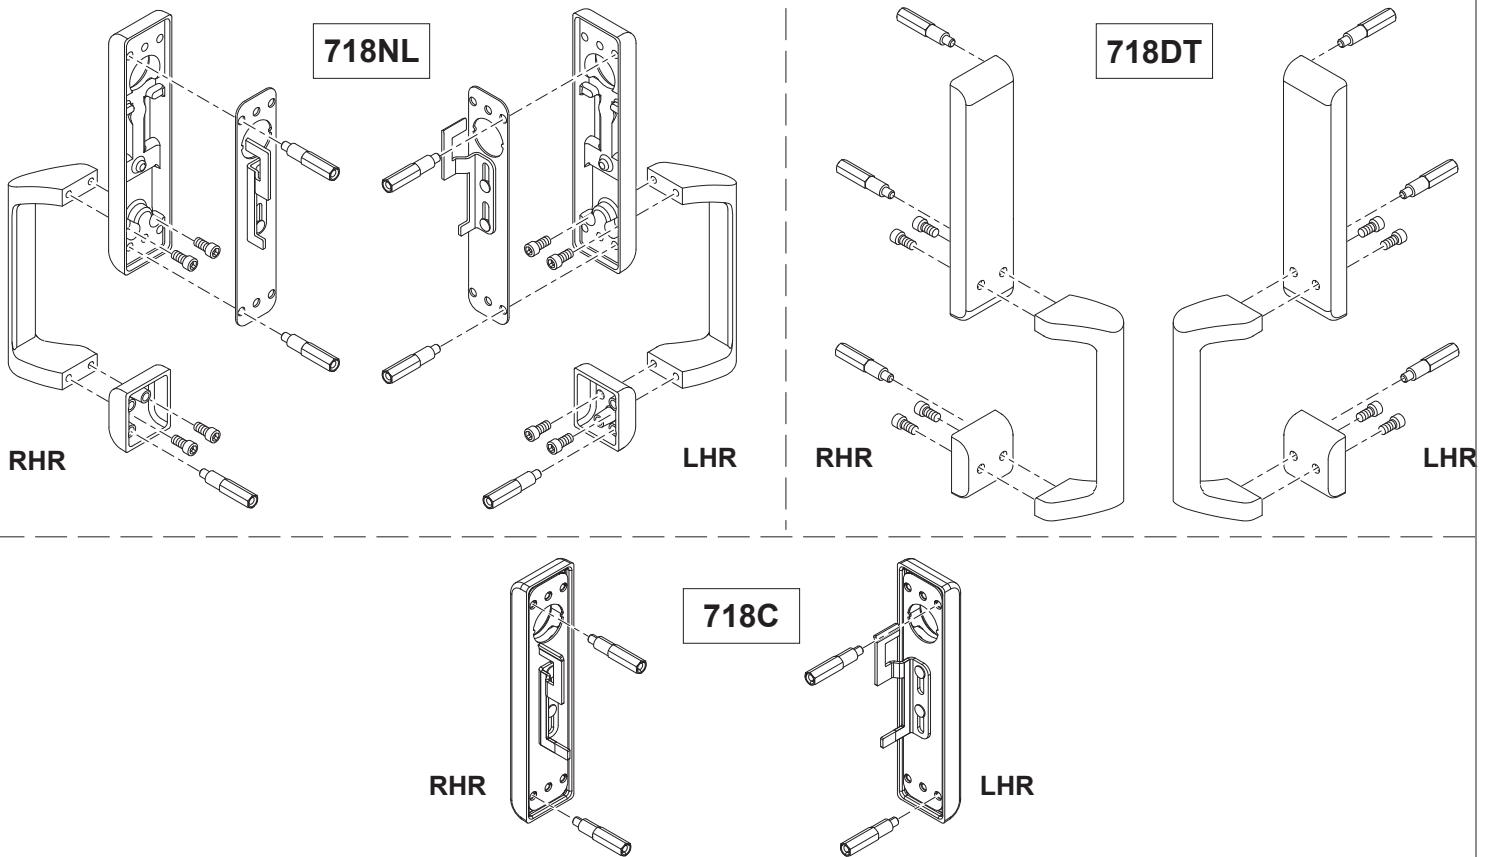

4 Install cylinder

Instale el cilindro

Installer le cylindre

