


FALCON®

Security Strike Installation


A: Mark the corners of the deadbolt with crayon or grease pencil. Retract deadbolt and close door. Throw deadbolt firmly against jamb to transfer markings.

B: Bore 1" diameter hole 1 1/8" deep, centered between the markings.

Caution: Deadbolt will not function correctly if hole is too shallow.

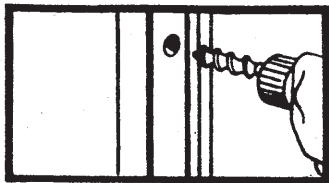

C: Place strike on jamb, centering over hole and parallel to edge of frame. Mark outline and remove strike.

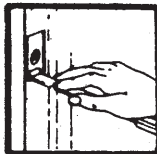

D: Chisel cutout 3/32" deep.



E: Install strike with screws provided. Put 3" long screws closest to door stop. Predrill 1/8" diameter holes. Lubrication of screws recommended.




ALLEGION™

© Allegion 2014
Printed in U.S.A.

030289-000-70 Rev. 10/14-d



5.13

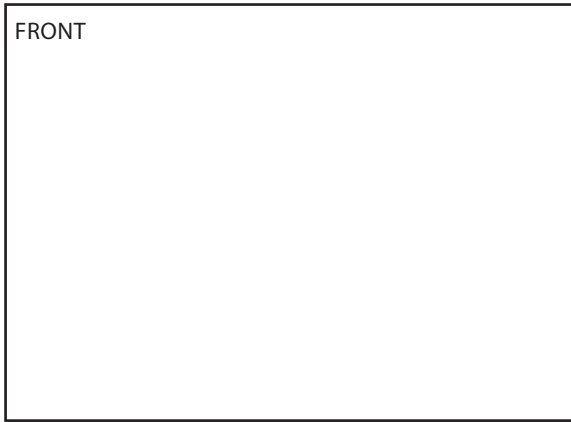

3.75

BEGINNING SHEET

Additional Notes:
1. None

Revision History						Revision Description:					
A	B	C	D	E	F	D > Revised artwork					
5305	0790	6683									
Material						Edited By		Approved By		EC Number	Release Date
White Paper						J. Ellis		M. Roberts		xxxxx	10/14
Notes						Title					
1. printed one side						Security Strike Installation					
2. printed black						Creation Date		Number		Revision	
3. tolerance ± .13						10-29-14		030289-000-70		D	
4. printed in country may vary						Created By		Activity		© Allegion 2014	
						J. Ellis		3899 Hancock Expwy Security, CO 80911			
						Software: InDesign CS6					