


Isolate and insulate wires not used

Connect Blue to Black When No Door Contact is Used

PowerNet RC Jumper Positions

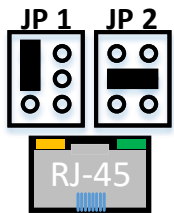

## RC-03. POE.EDK.DryContactOutput

Dwg No:	Sheet 1	of 1
Date: 11-13-17	Drawn By: David Tamarchenko	Version: 1.00.00