


3100

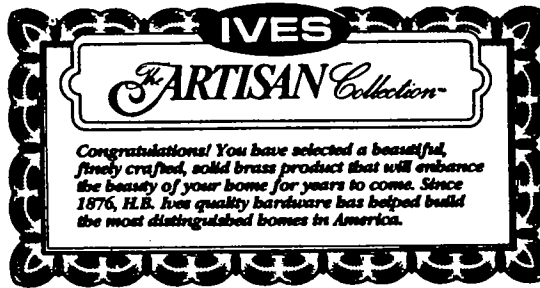


**HOUSE NUMBER**

FOR USE ON EXTERIOR OR INTERIOR DOORS OF HOMES, CONDOMINIUMS, OFFICES AND APARTMENTS FOR IDENTIFICATION. ALSO USED ON FENCE POSTS AND MAIL BOXES.

**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Phillips screwdriver, drill and 5/64" drill bit for pilot holes.

1. Position, drill and secure.

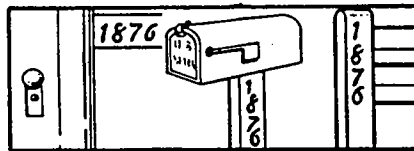

**MAINTENANCE INSTRUCTIONS**

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



DOOR KNOCKERS



MAILSLOTS



DOOR VIEWERS



HOUSE NUMBERS




HOUSE NUMBER 3 C2-3031-605 BRT

MADE EXCLUSIVELY FOR H.B. IVES IN PORTUGAL

©H.B. IVES 1983, NEW HAVEN, CT 06511

# 3100 - DOOR KNOCKER

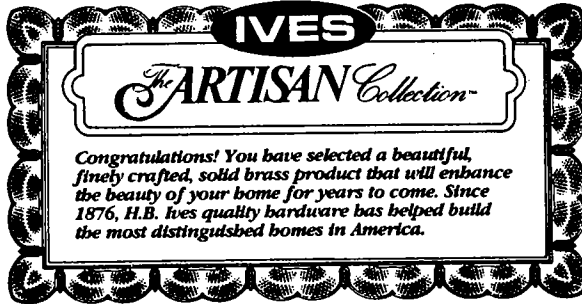


## DOOR KNOCKER

FOR USE ON EXTERIOR OR INTERIOR DOORS OF HOMES, CONDOMINIUMS, APARTMENTS AND OFFICES.


### INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 3/8" drill bit, awl and Phillips screwdriver.

1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
2. Mark centers with awl (or nail) and drill holes with 3/8" drill bit completely through door.
3. Mount door knocker with screws and cover washers.

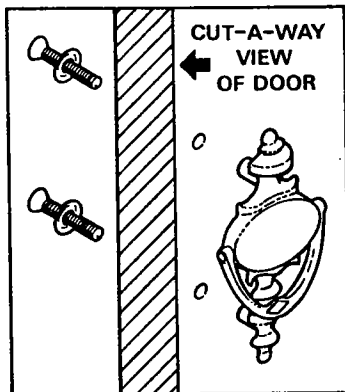

USE TEMPLATE BELOW FOR EASY INSTALLATION OF DOOR KNOCKER.

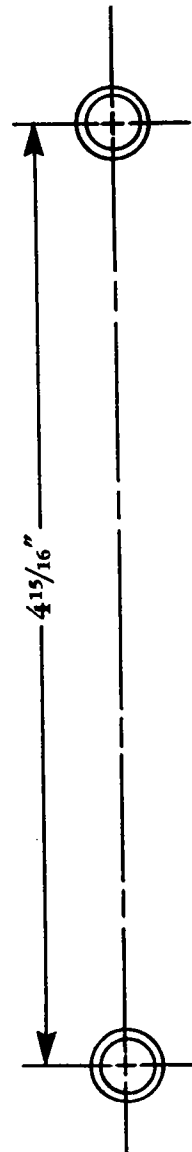

### MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



DOOR KNOCKER C2-3100-605 BRT

MADE EXCLUSIVELY FOR H.B. IVES IN PORTUGAL