


DOOR KNOCKER

FOR USE ON EXTERIOR OR INTERIOR DOORS OF HOMES, CONDOMINIUMS, APARTMENTS AND OFFICES.

INSTALLATION INSTRUCTIONS

- TOOLS REQUIRED:** Drill, 3/8" drill bit, screwdriver, awl or pencil.
1. Position and tape template on outside of door, centered from side to side 60" above threshold.
 2. Mark hole centers and drill holes with 3/8" drill bit completely through door.
 3. Mount door knocker with screws and cover washers.

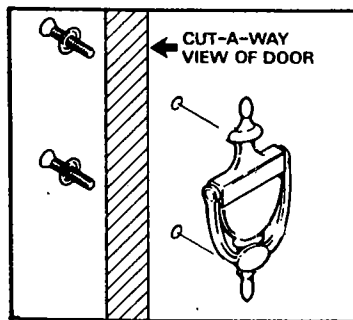

NOTE: Check product against template before installing.

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



USE TEMPLATE BELOW FOR EASY INSTALLATION OF DOOR KNOCKER.

