

## Installation Instructions

### APARTMENT DOOR KNOCKER

FOR USE ON EXTERIOR OR INTERIOR DOORS OF HOMES, CONDOMINIUMS, APARTMENTS AND OFFICES



USE TEMPLATE BELOW FOR EASY INSTALLATION OF DOOR KNOCKER.

02-3122-605 (BRIGHT)	02-3124-605 (BRIGHT)
02-3122-609 (ANTIQUÉ)	02-3124-609 (ANTIQUÉ)
02-3122-612 (BRONZE)	02-3124-612 (BRONZE)
02-3122-613 (DK. BRONZE)	02-3124-613 (DK. BRONZE)
02-3122-626 (CHROME)	02-3124-626 (CHROME)

### INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/16" drill bit, awl and screwdriver.

1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
2. Mark centers with awl (or nail) and drill pilot holes using 1/16" drill bit.
3. Mount door knocker and secure.

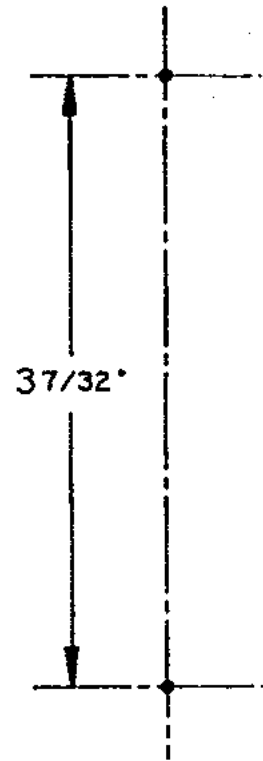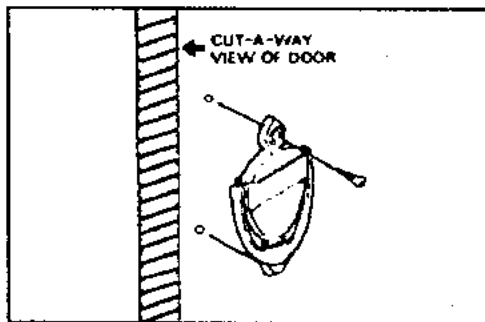

NOTE: Check product against template before installing.

### MAINTENANCE INSTRUCTIONS

H.B. IVES solid brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.


ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



DOOR KNOCKERS



MAIL SLOTS



DOOR VIEWERS



HOUSE NUMBERS

