


LINE CLEAT

FOR USE ON TRAILERS, AWNINGS AND FLAGPOLES TO SECURE ROPE OR CORD.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/16" drill bit, Phillips screwdriver, awl or pencil.

1. Place in desired position and mark.
2. Drill pilot holes and secure with screws provided.

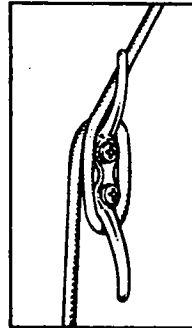

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



LINE CLEAT 4 1/2" C583A92 NAT

MADE IN USA