


# TEMPLATE MG600/MG600DT


## PLACE AGAINST HEADER

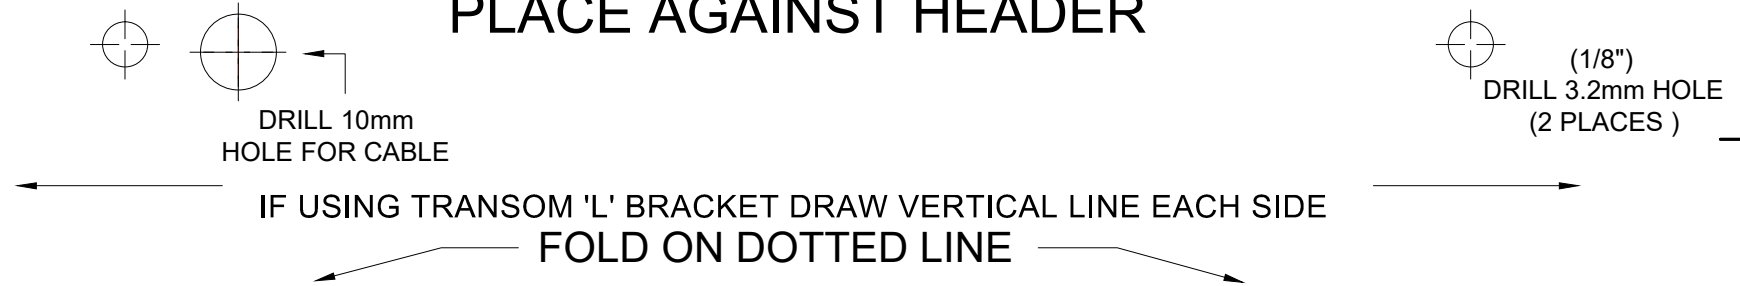

## PLACE AGAINST DOOR

PLACE 60MM(2.36") FROM SIDE FRAME OPPOSITE HINGES FOR L.H. DOOR INSTALLATION

PLACE 60MM(2.36") FROM SIDE FRAME OPPOSITE HINGES FOR R.H. DOOR INSTALLATION

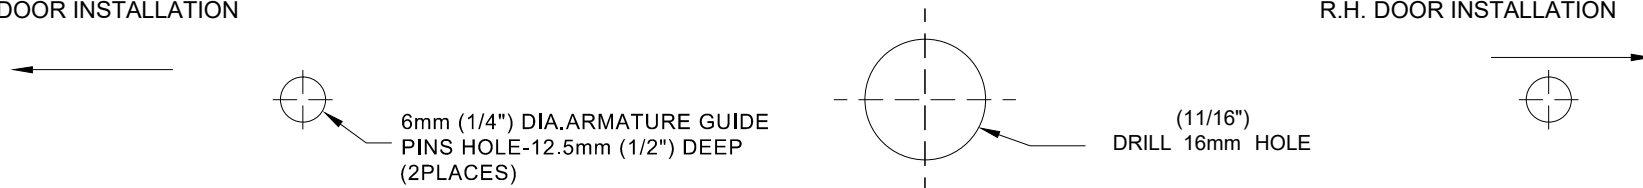

## TEMPLATE INSTRUCTIONS-SLMLINE MAGNET RANGE

This Template is designed for use with the Flat mounting plate for Outward opening doors. It can also be used to mark the position of the Armature plate when using the Transom 'L' bracket.

Fold the Template along the dotted line as indicated.

The edge of the Template must be placed 60mm(2.36") from the side Frame opposite the hinges.

The Door must be closed and latched when using the Template.

Ensure the Template is firmly fixed to the Door and Frame when Marking & Drilling.

Before drilling any holes check that the Frame is deep enough to take the depth of drilling as shown above. Check that the door is between 35 and 50 mm thick.

When all the holes have been drilled remove the Template and fit the Armature Plate and Magnet as per the instructions.



ALLEGION

©Allegion 2018  
47259093 Rev.01/18-a

**LOCKNETICS**