





23557606

674-OH Door Status Switch Overhead Doors



Installation Instructions

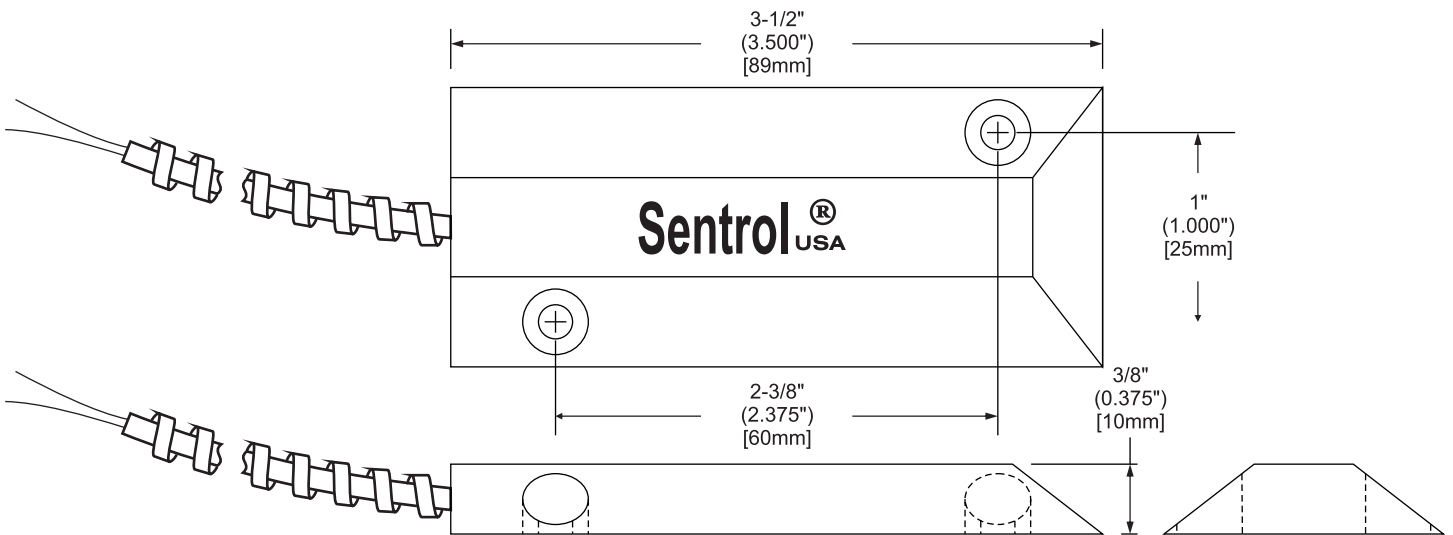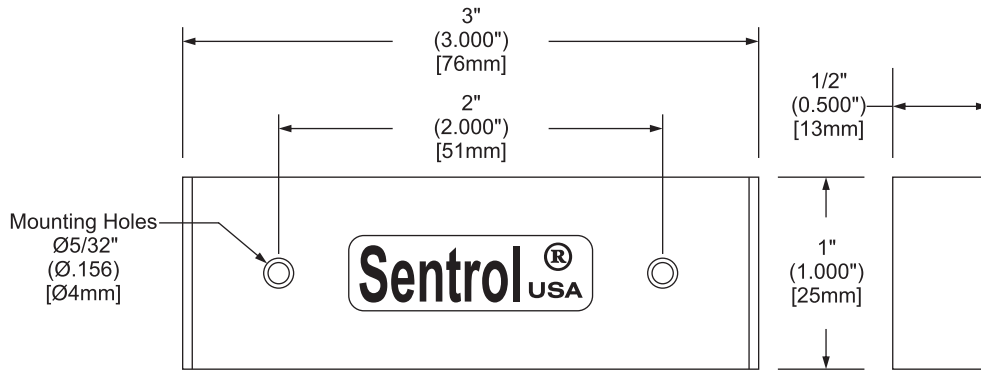

TO INSTALL:

- Position switch away from traffic flow.
- Align labels on switch and magnet in the same direction (switch is polarized).
- Secure switch to floor with appropriate, wood or concrete fasteners.
- Attach magnet either directly to door or with L-bracket.

WIRING

Lead Color	Function
Black	Common
White	Closed Loop (N.O.)
Red	Open Loop (N.C.)

Steel armored flex cable protects circuit wiring

Magnet protected by rugged aluminum housing

Low profile switch in rugged aluminum housing mounts directly to floor

