


Electronic Security

575 Birch St. Forestville, CT 06010

Phone: 866-322-1237 • Fax: 866-322-1233

www.schalge.com





SPACER ORIENTATION

INSTALLATION INSTRUCTIONS

- 1. Remove backing paper and center gasket left to right around lock with surface "B" against top of lock.
- 2. Next center spacer with bottom of spacer lying on surface "A" of gasket.
- 3. Using spacer as template, mark and drill three (3) 3/16 in. DIA. holes. Complete assembly as shown.


Optional: if anchors are not required use spacer as template, mark and drill (3) holes using a # 36 drill size.



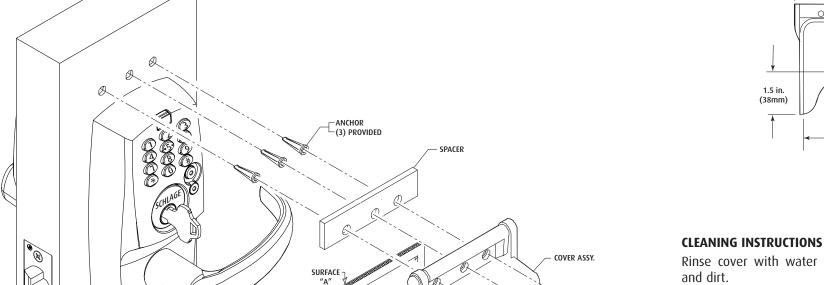

SURFACE

GASKET (ADHESIVE BACKING TOWARD DOOR)

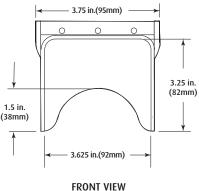

Rinse cover with water to remove abrasive dust

Wash with soap or mild detergent using a soft cloth. (DO NOT SCRUB.)

Rinse once more, then dry with a soft cloth or chamois.

To remove grease or wet paint, rub gently with a cloth wetted thoroughly with naphtha, then wash and rinse. (DO NOT USE RAZOR BLADES.)

INSTALLATION OF EC-1 MINI EXTERIOR COVER

All specifications and information shown were current as of publication, and are subject to change without notice.

SCREWS #6 x 1 1/4 in. ¬ (3) PROVIDED -