



iButton Key Fob Conversion

iButton Key Fob




Prox/Smart Key Fob with iButton




1

Carefully remove iButton from old key fob

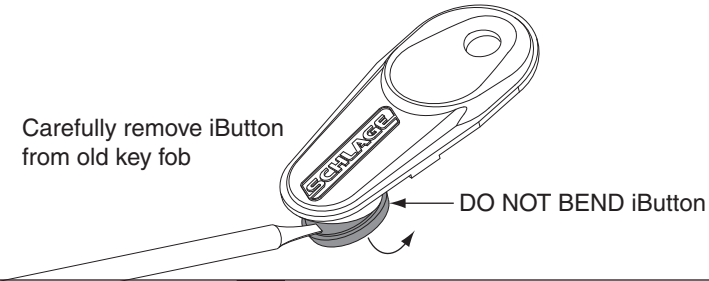


2

Remove all old adhesive

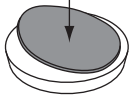

3

Expose adhesive

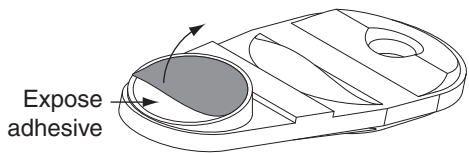

4

Apply iButton to new key fob

