


# VON DUPRIN®

## INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for holes, backset (line X-X), and center lines.
2. Prepare door for trim:
  - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
  - B. Locate and prepare all holes as shown.
3. Apply trim.
4. Apply exit device.

Trim	Dimension "A"	Dimension "B"
3308	10"	8"
3311	13"	11"
3314	16"	14"
3318	20"	18"

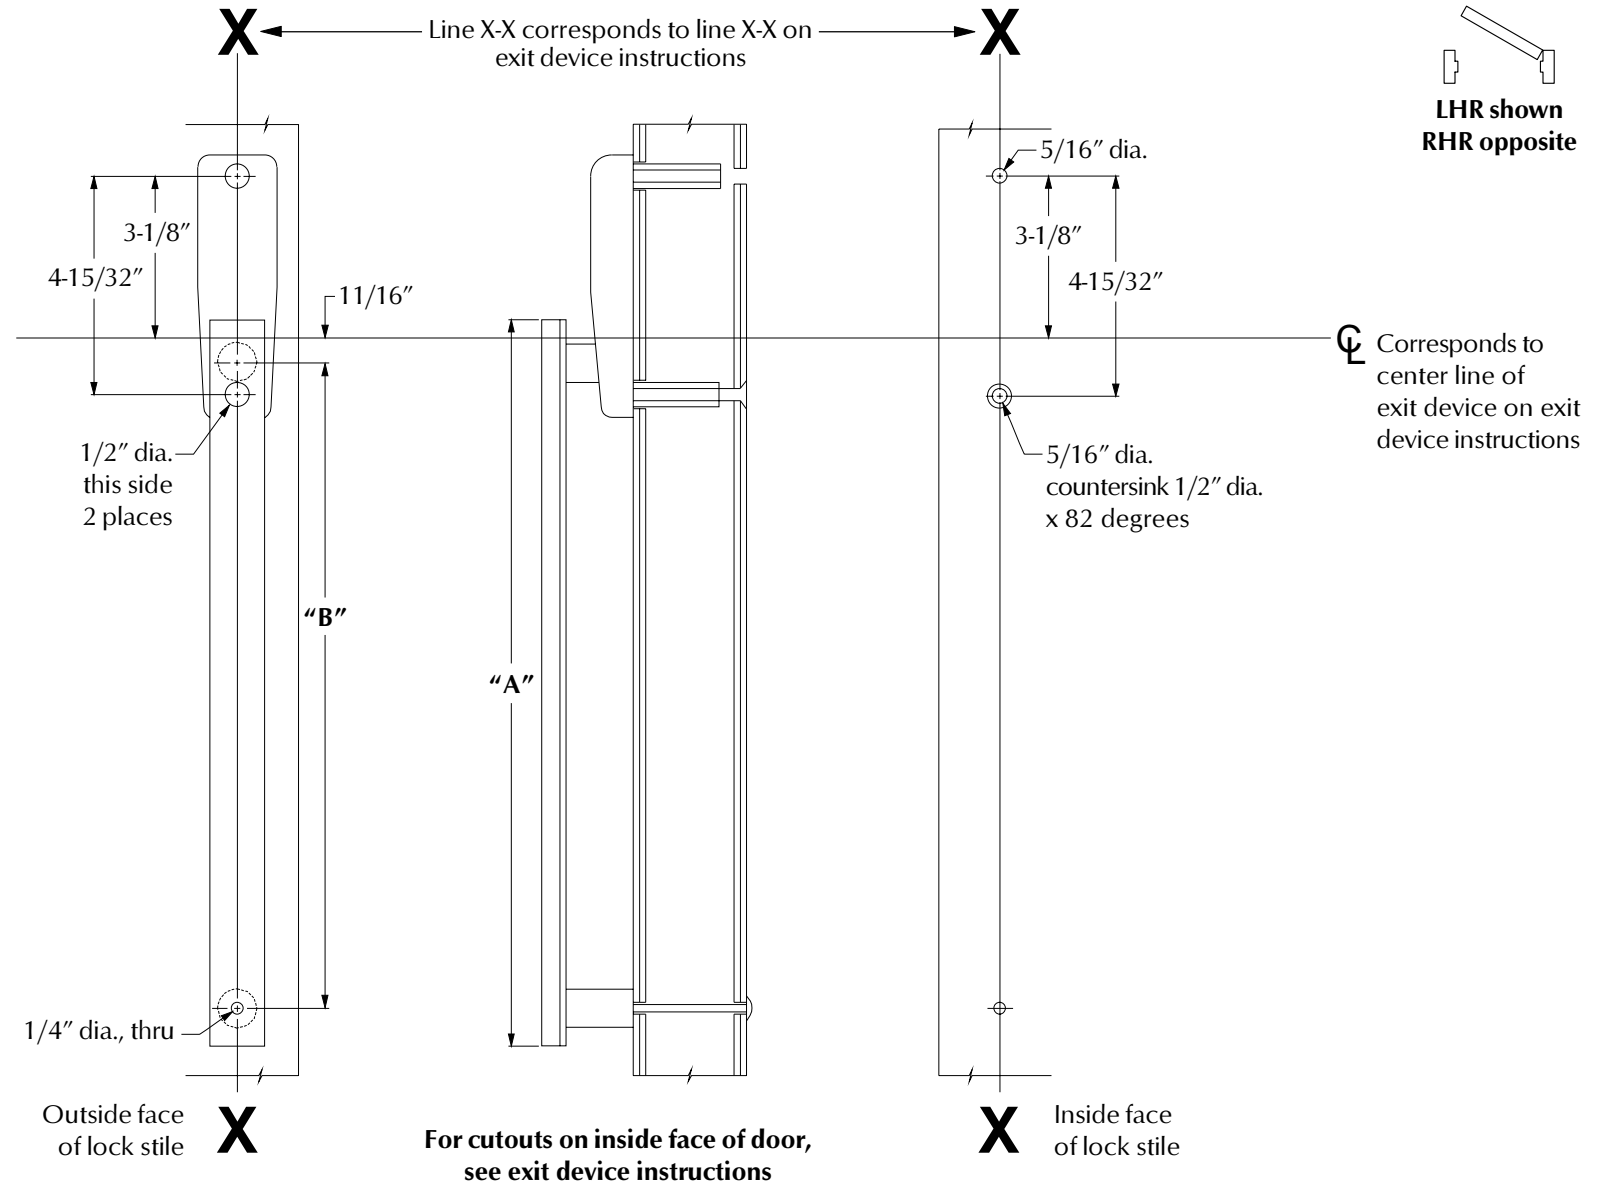


**IR Security & Safety**  
Proven Source. Proven Solutions.™

**3308, 3311, 3314, AND 3318DT TRIM**  
FOR 33/3527 DEVICE ON METAL DOOR

Copyright © 2004 Ingersoll-Rand.  
All rights reserved.

PAGE NO.  
**1 of 1**

REVISION  
**2**



**921322-00**