

# VON DUPRIN®

## INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
  - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure center line X-X is parallel to edge of door.
  - B. Locate and prepare holes as shown.
3. Install cylinder:
  - A. Cut off tailpiece to proper length (Figure 1).
  - B. Install cylinder and assemble component parts as shown (Figure 1).
4. Apply control.
5. Apply exit device.
  - A. Test key, control, and device action.


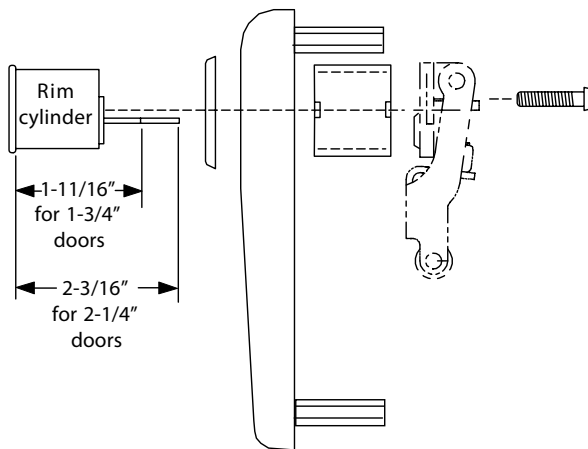


Figure 1

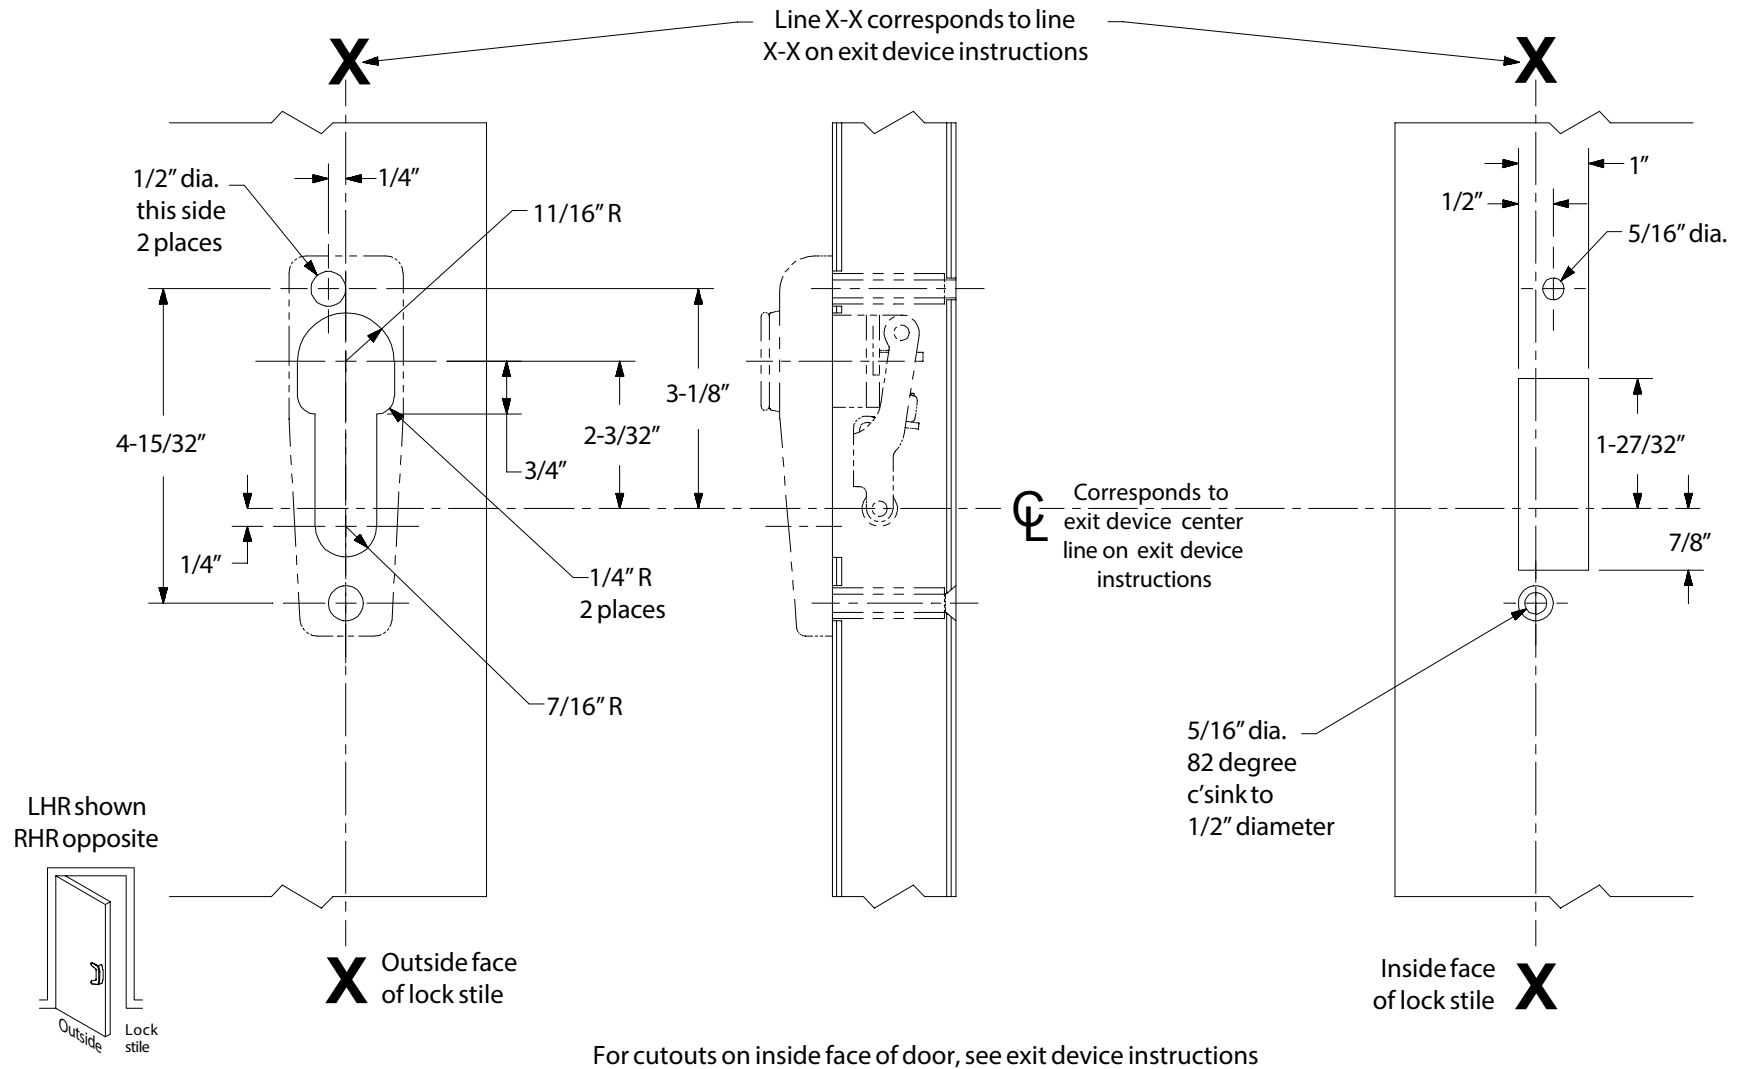

### 334 CYLINDER CONTROL FOR 33/35 RIM DEVICE ON METAL DOOR

Copyright © 2004 Ingersoll-Rand.  
All rights reserved.

PAGE NO.  
**1 of 1**

REVISION  
**7**



941090-00