

## GBK-RV Glass Bead Shims Kit


## **VON DUPRIN**®


Installation Instructions

For 33A/35A Series Exit Devices

- 1. Prepare inside face of door per device installation instructions.
- 2. Insert shims between the device and door (Figure 1).
  - Note: Shims are handed and flipped for RH or LH application.
- 3. Secure device with screws provided in this kit, see chart below.
- 4. For 33/3547A series device install rod connector extension (Figure 2).
- 5. For 33/3527A series device install rod guide shims (Figure 3).

	Screw size & type	Application	1-3/4" door	2-1/4" door
Α	1/4"-20 x 1-1/4" FPHMS	Surface, sex bolts, & trim		
	1/4"-20 x 1-3/4" FPHMS	Surface, sex bolts, & trim		•
В	#10-24 x 1" PPHMS	Surface & sex bolts	•	
	#10-24 x 1-1/2" PPHMS	Sex bolts		•
С	#10-24 x 1-1/8" PPHMS	Rim center case	•	•

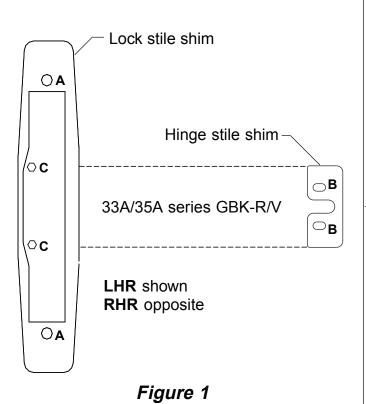



Rod connector extension

Figure 2

